

DIGITAL VIDEO RECORDER USER GUIDE


4 / 8 CHANNELS

VER V1.0(C11)




- Thank you for purchasing this Digital Video Recorder.
- Before using the Digital Video Recorder, please ensure that you read and understand the User Guide.
- Please store the User Guide at an easily accessible location.
- Before connecting and installing any third party cameras, monitors, alarms and computers, please refer to the appropriate instruction manual for proper operation.

.. SAFETY PRECAUTIONS

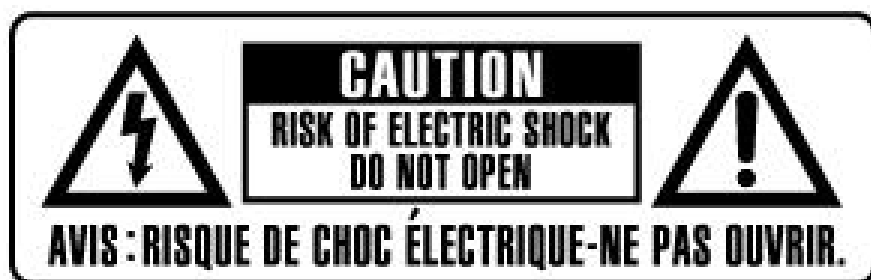

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).
NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED
SERVICE PERSONNEL.

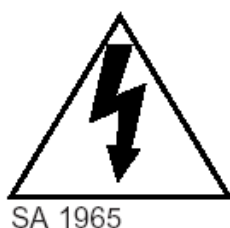

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of an insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:

TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD,
DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Contents

Disclaimer	4
Warning	4
Caution	6
Preventing Malfunction.....	6
Package Contents	7
1. Front Panel	8
2. Rear Panel Connectors	9
3. Remote Controller	10
II. INSTALLATION & CONNECTIONS	11
1. Camera, Monitor, Microphone, Alarm sensor and Power cord	11
2. PC system requirement for Network connection.....	14
III. OPERATIONS	15
1. LIVE MODE	15
2. PLAYBACK MODE.....	18
3. PTZ MODE	19
IV. MAIN MENU.....	20
1. RECORD SETUP	21
1.1. RECORD SETUP	21
1.2. QUALITY & FRAME RATE SETUP	22
2. EVENT SETUP	23
2.1. MOTION SETUP	23
2.2. MOTION AREA SETUP	24
2.3. SENSOR SETUP	25
3. SCHEDULE SETUP	26
3.1. SCHEDULE SETUP	26
3.2. SCHEDULE RECORD SETUP	27
3.3. HOLIDAY SETUP	27
4. CAMERA SETUP	28
5. PTZ SETUP	29
6. NETWORK SETUP	30
6.1. DHCP	30
6.2. STATIC IP	31
6.3. ADSL	31
6.4. HTTP SETUP	32
6.5. DDNS SETUP	33

6.6. MAIL SETUP	34
7. SYSTEM SETUP	35
7.1. DISPLAY SETUP	36
7.2. DATE/TIME SETUP	37
7.3. DEVICE SETUP	38
7.4. AV OUTPUT SETUP	39
7.5. ACCOUNT SETUP	40
8. UTILITIES	41
V. BACKUP & SEARCH	43
1. BACKUP SETUP	43
2. SEARCH SETUP	44
2.1. EVENT SEARCH	44
2.2. TIME SEARCH	46
Appendix 1: SPECIFICATION	47
Appendix 2: EMS S/W	49
Appendix 3: REMOTE VIEW ON MAC	86
Appendix 4: REMOTE VIEW ON PC	92
Appendix 5: MOBILE APPLICATION	94

Disclaimer

- The information in this manual is believed to be accurate and reliable as of the date of publication. The information contained herein is subject to change without notice. Revisions or New editions to this publication may be issued to incorporate such change
- We makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the Digital Video Recorder, the software, the hard drives, personal computers, peripheral devices, or unapproved/unsupported devices.

Warning

- Do not cover the ventilation opening or slots on the outer casing. To prevent the appliance from overheating, provide at least two inches of air space around the vent and the slots.
- Do not drop metallic parts through slots. This could permanently damage the Digital Video Recorder. Immediately turn the DVR's power off or unplug the power cord from the power outlet. Contact a qualified service personnel authorized by your equipment distributor
- Do not attempt to disassemble or alter any part of the equipment that is not expressly described in this guide. Disassembly or alteration may result in high voltage electrical shock. Qualified service personnel authorized by your equipment distributor should conduct internal inspections, alterations and repairs.
- Stop operating the equipment immediately if it emits smoke or noxious fumes. Failure to do so may result in fire or electrical shock. Immediately turn the DVR's power off, remove the power cable from the power outlet. Confirm that smoke and fume emissions have ceased. Please consult your DVR distributor.
- Stop operating the equipment if a heavy object is dropped or the casing is damaged. Do not strike or shake. Failure to do so may result in fire or electrical shock. Immediately turn the DVR's power off or unplug the power cord from the power outlet. Please consult your DVR distributor.
- Do not allow the equipment come into contact with, or become immersed in, water or other liquids. Do not allow liquids to enter the interior. The DVR has not been waterproofed. If the exterior comes into contact with liquids or salt air, wipe it dry with a soft, absorbent cloth. In the event that the water or other foreign substances enter the interior, immediately turn the DVR's Power off or unplug the power cord from the power outlet. Continued use of the equipment may result in fire or electrical shock. Please consult your DVR distributor.

-
- Do not use substances containing alcohol, benzene, thinners or other flammable substances to clean or maintain the equipment. The use of these substances may lead to fire. Use a dry cloth on a regular periodic basis and wipe away the dust and dirt that collects on the device. In dusty, humid or greasy environments, the dust that collects around the ventilation or the slots on the outer casing over long periods of time may become saturated with humidity and short-circuit, leading to fire.
 - Do not cut, damage, alter or place heavy items on the power cord. Any of these actions may cause an electrical short circuit, which may lead to fire or electrical shock.
 - Do not handle the device or power cord if your hands are wet. Handling it with wet hands may lead to electrical shock. When unplugging the cord, ensure that you hold the solid portion of the plug. Pulling on the flexible portion of the cord may damage or expose the wire and insulation, creating the potential for fires or electrical shocks.
 - Use only the recommended power accessories. Use of power sources not expressly recommended for this equipment may lead to overheating, distortion of the equipment, fire, electrical shock or other hazards.
 - Do not place the batteries near a heat source or expose them to direct flame or heat. Neither should you immerse them in water. Such exposure may damage the batteries and lead to the leakage of corrosive liquids, fire, electrical shock, explosion or serious injury.
 - Do not attempt to disassemble, alter or apply heat to the batteries. There is serious risk of injury due to an explosion. Immediately flush with water any area of the body, including the eyes and mouth, or clothing that comes into contact with the inner contents of the battery. If the eyes or mouth contact these substances, immediately flush with water and seek medical assistance from a medical professional.
 - Avoid dropping or subjecting the batteries to severe impacts that could damage the casings. It could lead to leakage and injury.
 - Do not short-circuit the battery terminals with metallic objects, such as key holders. It could lead to overheating, burns and other injuries.
 - The supplied power supply and power cord are designed for exclusive use with the Digital Video Recorder. Do not use it with other products or batteries. There is a risk of fire and other hazards.

Caution

- Do not operate the appliance beyond its specified temperature, humidity or power source ratings. Do not use the appliance in an extreme environment where there is high temperature or high humidity. Use the device at temperatures within +0°C - +40°C (32°F - 104°F) and humidity below 90 %. The normal operating power source for this device is DC 12V 50/60Hz.

Preventing Malfunction

- Avoid Strong Magnetic Fields. Never place the DVR in close Proximity to electric motors or other equipment generating strong electromagnetic fields. Exposures to strong magnetic fields may cause malfunctions or corrupt image data.
- Avoid Condensation Related Problems. Moving the equipment rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its external and internal surfaces. You can avoid this by placing the equipment in an airtight, resalable plastic bag and letting it adjust to temperature changes slowly before removing it from the bag.
- If Condensation forms inside the Digital Video Recorder. Stop using the equipment immediately if you detect condensation. Continued use may damage the equipment. Remove the power cord from the power outlet and wait until the moisture evaporates completely before resuming use.

CAUTION

- Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions.
- The socket-outlet shall be installed near the equipment and shall be easily accessible

Package Contents

Please check the package and contents for visible damage. If any components are damaged or missing, do not attempt to use the unit, contact the supplier immediately. If the unit must be returned, it must be shipped in the original packing box.

CONTENTS	QUANTITY	REMARK
DIGITAL VIDEO RECORDER	1 UNIT	
CLIENT SOFTWARE CD (INCLUDED USER MANUAL)	1	
REMOTE CONTROLLER	1	
BATTERY (COIN-CR2025)	1	
AC Adapter	1	
POWER CORD	1	
QUICK GUIDE	1	

I.CONTROLS


1. Front Panel




- 1) USB port : Connect a USB memory stick or HDD for light backups of video files to devices, or for firmware upgrades.
- 2) Remote control signal receiver : Do not block the receiver port on the unit. Doing so may cause the remote controller to function improperly.
- 3) LED NET : NET will be yellow during connecting on the network.
- 4) LED REC : REC will be red during recording.
- 5) LED PWR : PWR will be green when the system is on.

2. Rear Panel Connectors

4CH

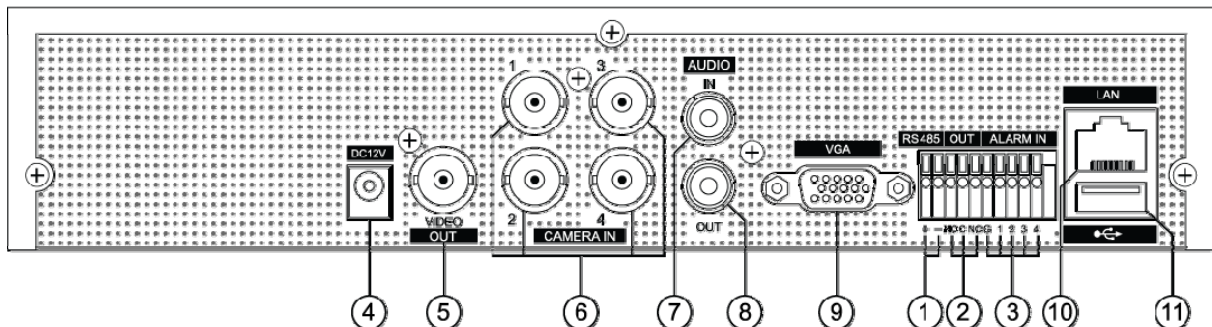


8CH

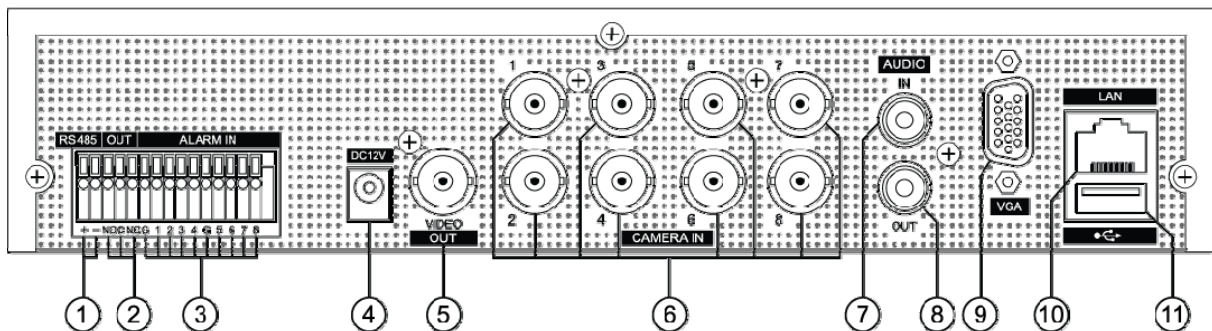

- 1) RS-485 : For connecting to PTZ camera
- 2) RELAY (ALARM OUT 1) : For connecting alarm out relays.
- 3) SENSOR (ALARM IN 1~4 , 1~8) : For connecting alarm inputs.
- 4) POWER : DC power Jack
- 5) MONITOR (Composite Output) : BNC standard composite video output connector.
SPOT : Spot out connector
- 6) CAM1~4, 1~8 : BNC input (Camera 1~4, 1~8) connectors
- 7) AUDIO Input
- 8) SPEAKER (Output) connectors : RCA
- 9) VGA out connector
- 10) LAN (RJ-45 Ethernet Port) : For connecting to remote PC via Ethernet network.
- 11) USB (2.0) : Connect USB mouse or USB external memory devices. To upgrade F/W, connect USB memory stick.

3. Remote Controller

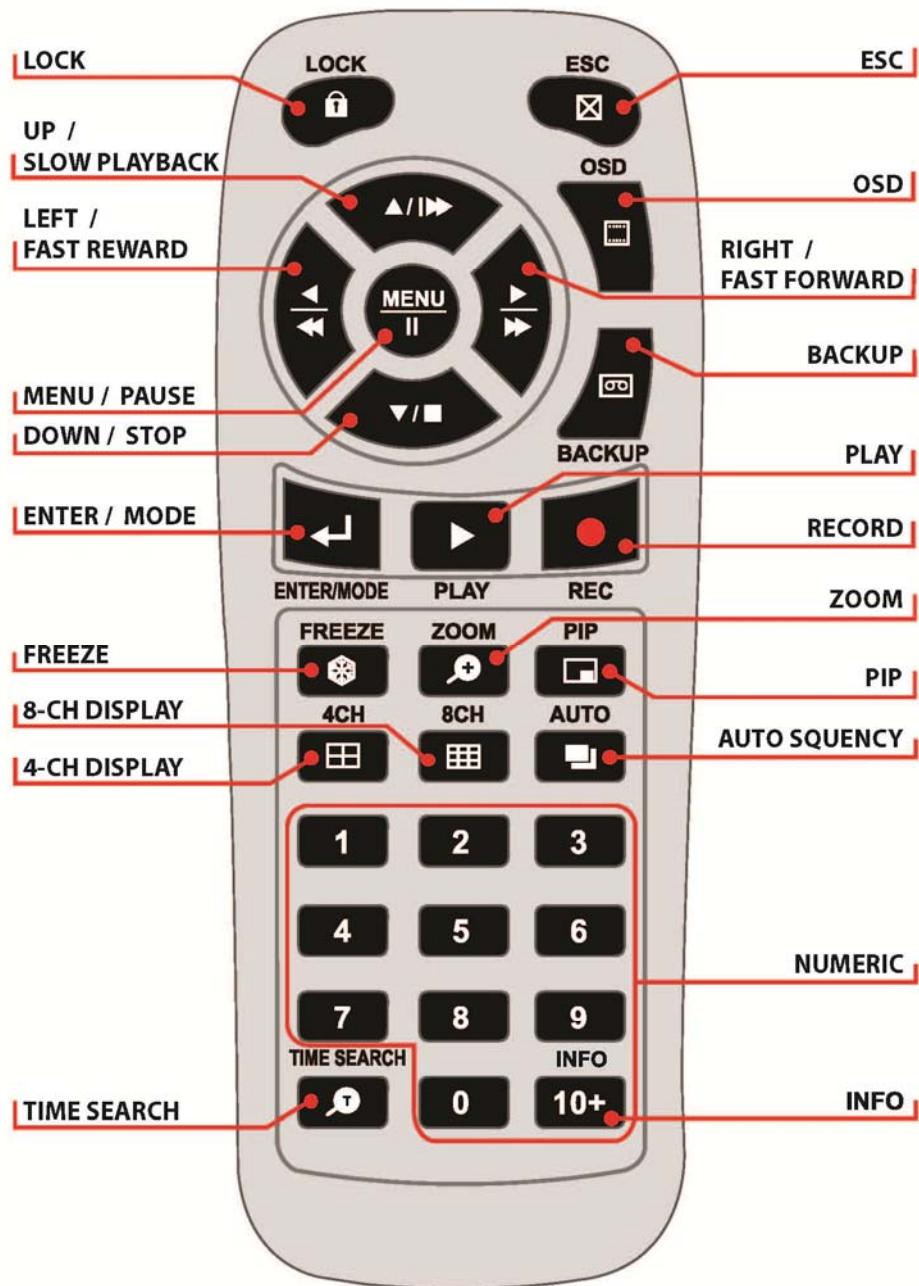


II. INSTALLATION & CONNECTIONS

1. Camera, Monitor, Microphone, Alarm sensor and Power cord

1-1. System Configuration Diagram

The following illustration is showing the fully installed system.

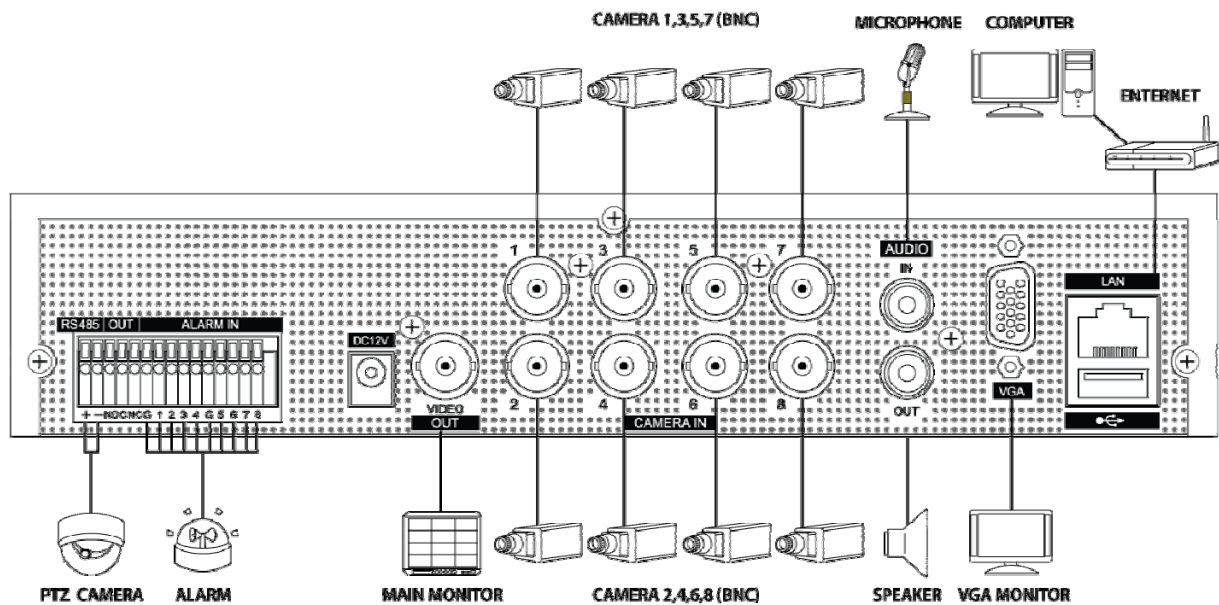


1-2. CAMERA

This product can be installed up to 4~8 cameras.


Connect cameras to the VIDEO IN (BNC) on the back panel of the system.

To connect a PTZ camera, connect the PTZ camera's control line to the RS-485 TX+, RS-485 TX- terminal and connect the video output to one out of VIDEO IN on the back panel of the product.

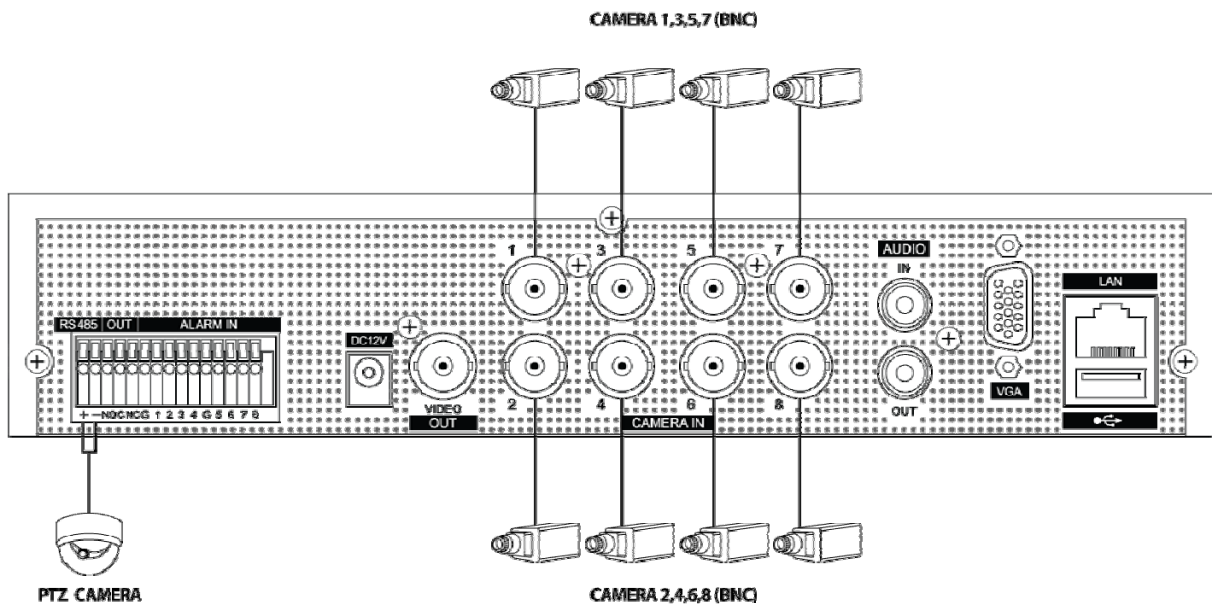

1.3 AUDIO

The system has one channel audio input and output. If you wish to record and playback audio signal, connect the proper audio device (microphone) to the AUDIO IN and speaker to the AUDIO OUTPUT (See illustration below).

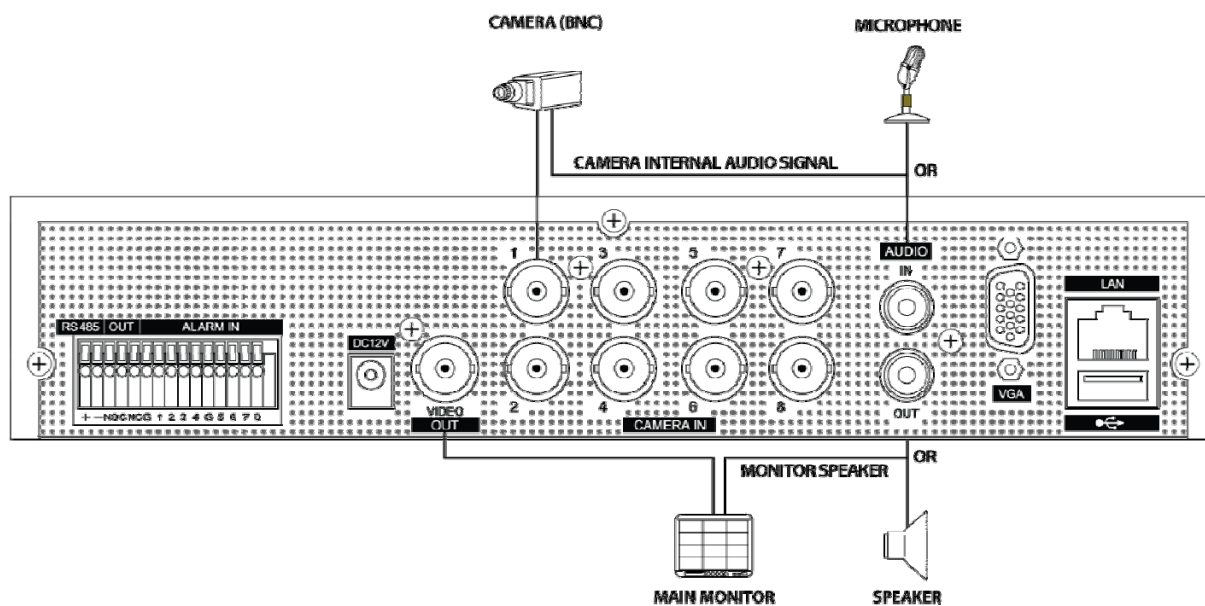

1.4 MONITOR

There are three video outputs (1-BNC, 1-VGA) on the rear panel of the system. Connect monitors depending on your application.

1- BNC for Spot composite video output (Or Main composite video output as option).

1- VGA output.

2. PC system requirement for Network connection.

(a) Pentium-4 2.0GHz or higher

(b) 256MB System Memory

(c) 1,024 x 768 Display Resolution, 32 Bit color

(d) Windows XP, VISTA, Windows 7

(e) Spare 10/100-BaseT Ethernet Port

(f) Microsoft DirectX 9.0c

It is recommended to have DirectX 9.0c version in Client PC. DirectX 9.0c is available for download from Microsoft homepage

(www.microsoft.com/windows/directx)

<Disclaimer>

The remote viewing on network connection may not work on all personal computers due to difference in personal settings and hardware configurations.


III. OPERATIONS

To turn on the DVR, connect the power to the port on the rear panel. When the DVR is powered on, the Live Viewing screen will appear after showing “SYSTEM STARTS” on the colour bar for about 30 seconds.





1. LIVE MODE

1) **SETUP :**

(1)  / Main Menu : To open Main Menu

(2)  / Search Setup : Search Setup (Refer to)

(3)  / Backup : Backup Menu ()

(4)  / PTZ Control : PTZ Mode

2) Record On/OFF



/ Record On/Off

3) PLAY BACK



/ Playback

4) Display Setup :



 
/ Pause : Freez display in the live mode.




/ PIP : Picture-In-Picture



/ Zoom : Zoom.

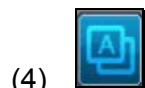

 / Auto-Seq : Auto Sequency. Click right mouse button, it will be escaped.

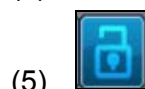

/ Lock : Lock the authorization to operate SETUP, Record On/Off and PLAY BACK.

5) Full Screen



/ Full Screen

6) Quad Display




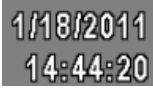
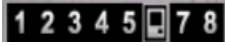













/ Quad Display

7) 9-Channel Display (only for 8CH)



/ 9-Channel Display

8) Status Bar












- (1)  : Shows the percentage of current using space on the hard disk.
(Ex. 99% means 99% of all HDD's capacity are used and only 1% is remained.)
- (2)  : Shows the date(DD/MM/YY as default), day of the week and time (24 Hours clock as default).
- (3)  : Shows status of all channels.
(Notice : Indicate , if detected video loss on specific channels.)
- (4)  : Indicate recording is on.
- (5)  : Indicate shcedule recording is on.
- (6)  /  : Indicate audio is enable / disable.
- (7)  : Indicate lock is activated.
- (8)  : Indicate network is connected.
- (9)  : Indicate USB is connected.
- (10)  : Indicate display is frozen on the live mode.
- (11)  : Indicate Auto-sequency is activated.
- (12)  : Indicate PTZ is activated.
- (13)  : Indicate Motion detected on the channel.
- (14)  : Indicate Alaram trigerred on the channel.

2. PLAYBACK MODE



Press the PLAY button on the remote controller or click

















- 1)  /  : Play / Pause
- 2)  : STOP and return to Live mode.
- 3)  : Fast Reverse. Increase reverse playback speed 2X, 4X, 8X, 16X, 32X and 64X.
- 4)  : Increase reverse playback speed 2X, 4X, 8X, 16X, 32X and 64X.
- 5)  : Increase slow playback speed 1/2X, 1/4X and 1/8X.
- 6)  : Full screen display
- 7)  : Quad display
- 8)  : 9 channel display (only for 8CH)
- 9)  : Zoom-in display. Click to activate / inactivate Zoom and increase X1 to X8.
- 10)  : Save a snap image of current monitoring image

3. PTZ MODE

To activate Pan/Tilt/Zoom control, press  of the SETUP in the live mode.










- 1)  : Select to cancel all PTZ operation.
- 2)  : Set PRESET number. (1 ~ 255).
- 3)  : Go to the preset position.
- 4)  : Save current PTZ location at set preset number.
- 5)  : Press to activate Tour.
- 6)  : Press to activate PIP. (Notice : Customized function for specific protocol.)
- 7)  : Press to activate Freeze. (Notice : Customized function for specific protocol.)
- 8)  : Press to activate ZOOM. (Notice : Customized function for specific protocol.)
- 9)  : Control PTZ in 360° as wish to move.
- 10)  : Press +/- to zoom in and out.
- 11)  : Press +/- to focus in and out.
- 12)  : Press +/- to iris open and close.
- 13)  : Aux 1 ~ 8. "AUTO" key + Number"(1 ~ 8) Key.
- 14)  : Press to backup ((Notice : Customized function for specific protocol.)

(Notice : Some of these functions may not be available depending on PTX protocol.)

IV. MAIN MENU

To enter the Main Menu, you will need to select account and user password.
(Notice : default as "Admin" and "000000".)



- 1)  /  : Switch between numeric and alphabetic characters.
- 2)  : Press to cancel setup and choose other user accounts.
- 3)  : Space key. Press to make spaces.
- 4)  : To identify the password and enter the setup if the password is verified.
- 5)  : Switch between capital and small letters.
- 6)  : Back space key. To delete the last letter.

1. RECORD SETUP



1.1. RECORD SETUP



ITEM	ADJUSTMENT
HDD FULL	Select STOP to stop recording or OVERWRITE to reuse the HDD when HDD is full 「 Stop 」 : Stop Recording 「 Overwrite 」 : Start to overwrite that begin from the oldest data of HDD, and continue to record.
OSD position X	Setup OSD X axis
OSD position Y	Set up OSD y axis
OSD position setup	Set up OSD axis
Video Preservation	Setup the video preservation period. Recorded video will be deleted automatically after expiry of preservation period.
Quality & Frame Rate Setup	Setup the quality and frame rate for each channel under normal recording and event recording type.

(Notice : OSD on RECORD SETUP is only for RECORD DATA and once it sets, it should not be modified afterward.)


1.2. QUALITY & FRAME RATE SETUP

No.	Resolution	Quality	F/S
<input checked="" type="checkbox"/>	FRAME	HIGH	0
<input checked="" type="checkbox"/> 1	FRAME	HIGH	30
<input checked="" type="checkbox"/> 2	FRAME	HIGH	30
<input checked="" type="checkbox"/> 3	FRAME	HIGH	1
<input checked="" type="checkbox"/> 4	FRAME	HIGH	1
<input checked="" type="checkbox"/> 5	FRAME	HIGH	1
<input checked="" type="checkbox"/> 6	FRAME	HIGH	1
<input checked="" type="checkbox"/> 7	FRAME	HIGH	1
<input checked="" type="checkbox"/> 8	FRAME	HIGH	1

ITEM	ADJUSTMENT
Normal setup/ event setup	Select recording mode
Resolution	Specify the record picture resolution for each camera. CIF : 360x240(NTSC) / 360X288(PAL) FIELD : 720x240(NTSC) / 720X288(PAL) FRAME : 720x480(NTSC) / 720X576(PAL)
No.	Check/uncheck the box enable/disable selected channel recording. (Notice : if you select options on the top of No., including Resolution, Quality and F/S, they are commonly applied to all channels.)
Quality	Specify the record picture quality for each camera. ULTRA → SUPER → HIGH → MIDDLE → LOW
FPS	Select recording frame rate for each camera.
Auto	Assign each channel with its maximum accessible fps



(Notice : If you set Normal or Event as AUTO, it will be automatically selected as View Normal or View Event.)

2. EVENT SETUP

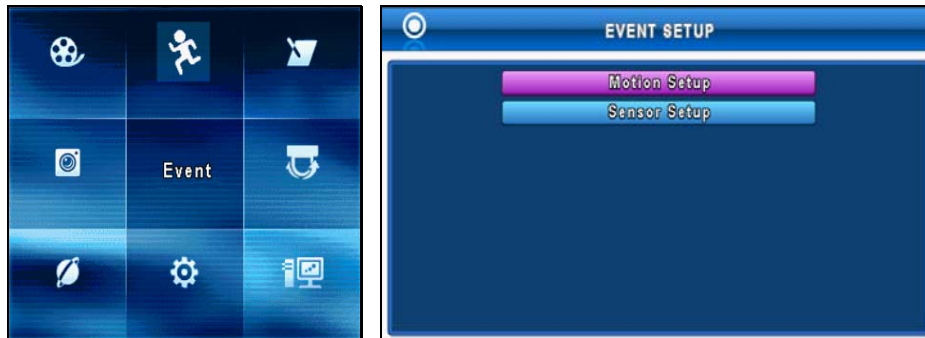

 2.1. MOTION SETUP



ITEM	ADJUSTMENT
Alarm Duration(Seconds)	When motion detect · the number of seconds continuous alarm. (DURATION : 1 ~ 60 sec)
Motion Popup	Set Enable / Disable. If Enable, it will display full screen of motion detected channel.
1~8 (or 1~4 on 4CH)	You can setup independently for each channel.
Enable	Check the box to Enable/Disable motion detection for each channel.
Sensitivity	Drag the white bar or press   to set up Sensitivity from 0 to 10 for each channel. The lower value you set the higher sensitivity it will be.
Motion Area Setup	Enter to setup motion detection area
Apply to All	Press the button to apply same setting on all channels.

2.2. MOTION AREA SETUP

The motion detection has been divided into 22x15 grids. The default detection area is full screen as it marked in transparent for local DVR and purple for remote access. Areas deselected for motion detection are marked in red for both local and remote site.



ITEM	ADJUSTMENT
Mask Mouse Selection	Switch between “select” and “deselect” for cursor-dragging function
All Area Detection	Select entire screen as detection area.
Mask All Area	Deselect entire detection area.
Continue	Continue setup
Exit & Save	Save setup and leave
Exit & Discard	Cancel setup and leave

2.3. SENSOR SETUP

SENSOR SETUP

Alarm Duration(Seconds):

☐ Sensor Popup

No.	Polarity
1	Off
2	Off
3	Off
4	Off
5	Off
6	Off
7	Off
8	Off

All Off
All N.O
All N.C


ITEM	ADJUSTMENT
Alarm Duration	When alarm detected, for the number of seconds alarm will be continuous.
Sensor Popup	When sensor detected, will be displayed full screen.
1~8 (or 1~4 on 4CH)	Set each alarm inputs, 1~8 (1~4 on 4CH) independently.
Polarity	Specify the type of alarm input. Select N.O / N.C / OFF.
All Off	Set All alarm inputs as not used.
All N.O	Set All alarm inputs as N.O. (Normal Open).
All N.C	Set All alarm inputs as N.C. (Normal Close).

3. SCHEDULE SETUP

Set for recording modes in a daily or weekly with events, as normal, motion and sensor.



3.1. SCHEDULE SETUP

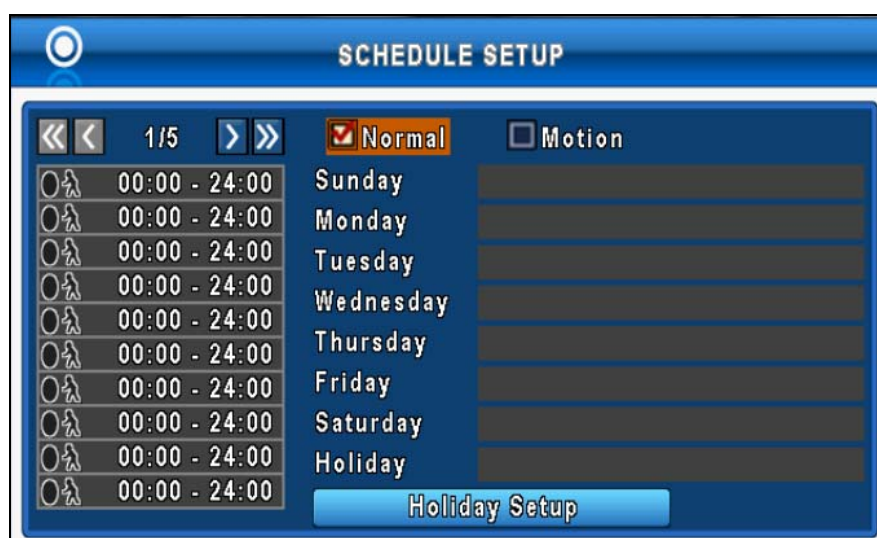

ITEM	ADJUSTMENT
Page	Each page provides 10 schedules for setup. 5 pages in total.
Holiday Setup	Enter to setup holiday, up to 50 days, other than weekends.
Normal / Motion / Sensor	Select recording modes on schedule.

3.2. SCHEDULE RECORD SETUP

Click on the time on the left side. The setup menu will be displayed. You can have detail setup by dates, Time and event.

☒ Enable Schedule Record
☐ Enable Schedule Motion Detect

Start Time: 00 : 00
End Time: 24 : 00

☒ Sunday ☒ Monday ☒ Tuesday
☒ Wednesday ☒ Thursday ☒ Friday
☒ Saturday ☐ Holiday

3.3. HOLIDAY SETUP

Setup the holiday schedule on each month as maximum 50 days.

HOLIDAY SETUP

13/50
January
February
March

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31		
1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29				
1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31		


4. CAMERA SETUP



ITEM	ADJUSTMENT
1 ~ 8 (or 1~4 on 4CH)	You can setup independently for each channel.
Covert	Check the box to Enable/Disable mask function for LIVE mode
Sharpness	Drag the bar or press to adjust Sharpness of your camera from value 0 to 15. The default value is 1.
Brightness	Drag the bar or press to adjust Brightness of your camera from value 0 to 255. The default value is 128.
Contrast	Drag the bar or press to adjust Contrast of your camera from value 0 to 255. The default value is 100.
Saturation	Drag the bar or press to adjust Saturation of your camera from value 0 to 255. The default value is 128.
Hue	Drag the bar or press to adjust Hue of your camera from value 0 to 255. The default value is 128. (Notice : This function doesn't support at PAL system.)
Name	Set up name of each channel
Volume	Audio Input volume for CH1 under LIVE mode and recording mode can be adjusted. (Notice : only 1 CH can be adjusted on 4 / 8CH Model.)

5. PTZ SETUP

The DVR allows users to control PTZ functions of your camera. To enable PTZ function, the 485 cable should be connected to the RS-485 port of DVR.

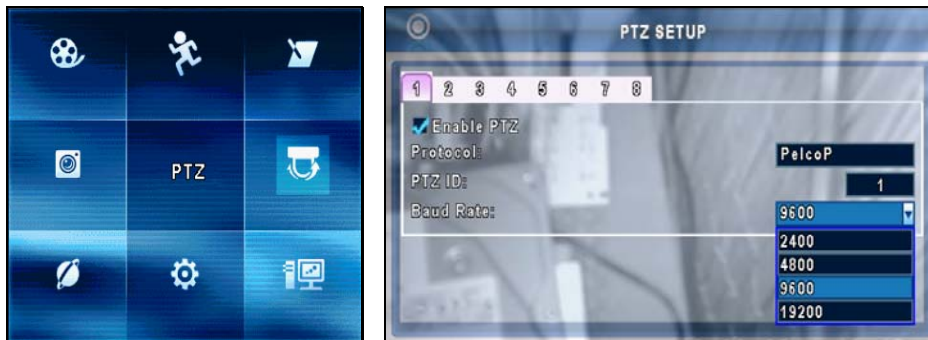

ITEM	ADJUSTMENT
Enable PTZ	Click the box to Enable/Disable PTZ function for each channel.
Protocol	Set up the protocol of PTZ cam. The supported protocols are PELCO-P, PELCO-D, KND, LI-LIN, SAMSUNG, LG, AV TECH.
PTZ ID	Click or press to set up PTZ ID. The valid ID value is from 1 ~ 64.
Baud Rate	Select Baud Rate for PTZ from 2400, 4800, 9600, 19200
RS-485 ID	Select RS-485 ID from 1 to 64
RS-485 Baud Rate	Select RS-485 Baud Rate from 2400, 4800, 9600, 19200

6. NETWORK SETUP

There are three ways to connect to the network as followed.



6.1. DHCP

When DHCP is selected, IP address will be assigned by DHCP server automatically.

NETWORK SETUP

☐ ADSL ☒ **DHCP** ☐ Static IP

IP Address: 0 . 0 . 0 . 0

Subnet Mask: 0 . 0 . 0 . 0

Gateway: 0 . 0 . 0 . 0

HTTP Setup

DDNS Setup

Mail Setup

ITEM	ADJUSTMENT
IP Address	Enter IP address provided by ISP
Subnet Mask	Enter IP address of Subnet Mask provided by ISP
Gateway	Enter IP address of Gate way provided by ISP

6.2. STATIC IP

Select static IP for network connection, the following information is required.

The screenshot shows a 'NETWORK SETUP' window with a blue header and a dark blue background. At the top, there are three radio buttons: 'ADSL' (unchecked), 'DHCP' (unchecked), and 'Static IP' (checked). Below these, there are four rows of input fields: 'IP Address:' with the value '192 . 168 . 10 . 124', 'Subnet Mask:' with '255 . 255 . 255 . 0', 'Gateway:' with '192 . 168 . 10 . 1', and 'DNS:' with '168 . 95 . 1 . 1'. At the bottom, there are three buttons: 'HTTP Setup', 'DDNS Setup', and 'Mail Setup'.

ITEM	ADJUSTMENT
IP Address	Enter IP address provided by ISP
Subnet Mask	Enter IP address of Subnet Mask provided by ISP
Gateway	Enter IP address of Gate way provided by ISP
DNS	Enter DNS address provided by ISP. (Note: The correct DNS address must be entered for DDNS function)

6.3. ADSL

Select ADSL for network connection, the following information is required.

The screenshot shows a 'NETWORK SETUP' window with a blue header and a dark blue background. At the top, there are three radio buttons: 'ADSL' (checked), 'DHCP' (unchecked), and 'Static IP' (unchecked). Below these, there are two rows of input fields: 'User ID:' and 'Password:'. At the bottom, there are three buttons: 'HTTP Setup', 'DDNS Setup', and 'Mail Setup'.

ITEM	ADJUSTMENT
User ID	Enter user ID provided by ISP
Password	Enter password provided by ISP

6.4. HTTP SETUP

No.	Resolution	Quality	F/S
<input checked="" type="checkbox"/>	QCIF	HIGH	1
<input checked="" type="checkbox"/> 1	QCIF	HIGH	7
<input checked="" type="checkbox"/> 2	QCIF	HIGH	7
<input checked="" type="checkbox"/> 3	QCIF	HIGH	1
<input checked="" type="checkbox"/> 4	QCIF	HIGH	1
<input checked="" type="checkbox"/> 5	QCIF	HIGH	1
<input checked="" type="checkbox"/> 6	QCIF	HIGH	1
<input checked="" type="checkbox"/> 7	QCIF	HIGH	1
<input checked="" type="checkbox"/> 8	QCIF	HIGH	1

ITEM	ADJUSTMENT
Enable HTTP Server	Check to enable HTTP server. Users can remotely access into the DVR over the network if the HTTP function is activated.
Port	Enter a valid port value from 1 up to 65000. The default value is 7000.
Auto	Assign each channel with its maxima accessible fps
No.	Chanel number
Resolution	Specify the picture resolution for each camera sending by network. QCIF : 180x120(NTSC) / 180X144(PAL) CIF : 360x240(NTSC) / 360X288(PAL) (Notice : If you select options on the top of No., including Resolution, Quality and F/S, they are commonly applied to all channels.
Quality	Set up record quality. There are below basic, basic, normal, high, highest
FPS	Set up record FPS

6.5. DDNS SETUP

DDNS SETUP

☒ Enable DDNS

DDNS Server: dyndns.org

Domain Name: dyndns.org

User ID: dvrhost.com

Password:

DDNS SETUP

☒ Enable DDNS

DDNS Server: dvrhost.com

Domain Name: K04D00E.dvrhost.com

User ID:

Password:

DDNS Test Start

ITEM	ADJUSTMENT
Enable DDNS	Enable/disable DDNS function.
DDNS Server	Enter the registered SMTP Server. dyndns.org : Public DDNS server dvrhost.com : DDNS server supporting by manufacturer
Domain Name	Enter the completed registered SMTP Server. dyndns.org : <u>username</u> .dyndns.com dvrhost.com : <u>hostname</u> .dvrhost.com (automatically displayed) (Ex. If the user name is h.264 and you choose dyndns as your server, you should enter : <u>h.264.dyndns.org</u>)
User ID	Enter user ID.
Password	Enter password.
DDNS Test	Check the registered status of hostname to dvrhost.com. (Not available on dyndns.org)

6.6. MAIL SETUP

When events (VLOSS, MOTION) occur, email will be sent to the receiver account automatically.


The top screenshot shows the 'MAIL SETUP' menu with the following options:

- ☐ Enable E-mail Notification ☐ Default
- SMTP Server: [text field]
- Port: [text field] 25
- User ID: [text field]
- Password: [text field]
- Sender E-mail: [text field]
- Trigger Events:
 - ☒ Video Loss
 - ☒ Motion
- Receiver E-mail [button]

The bottom screenshot shows the same menu with a numeric keypad overlay for entering the SMTP Server name. The keypad includes digits 1-0, symbols *, -, @, #, ., and a backspace key.

ITEM	ADJUSTMENT
Enable E-mail Notification	Check the box to enable/disable E-mal Notification function.
SMTP Server	Enter to set up SMTP Server name. (Varies according to the user)
User Name	Enter to set up User Name.
Password	Enter to set up Password.
Sender E-mail	Enter to set up e-mail address of receivers.
Trigger Event	Enter to select events to send out E-mail notifications when below circumstances happen: Motion, Sensor and Vloss (Video Loss).
Receiver E-mail	Enter to set up e-mail addresses for up to 10 receivers individually.

7. SYSTEM SETUP

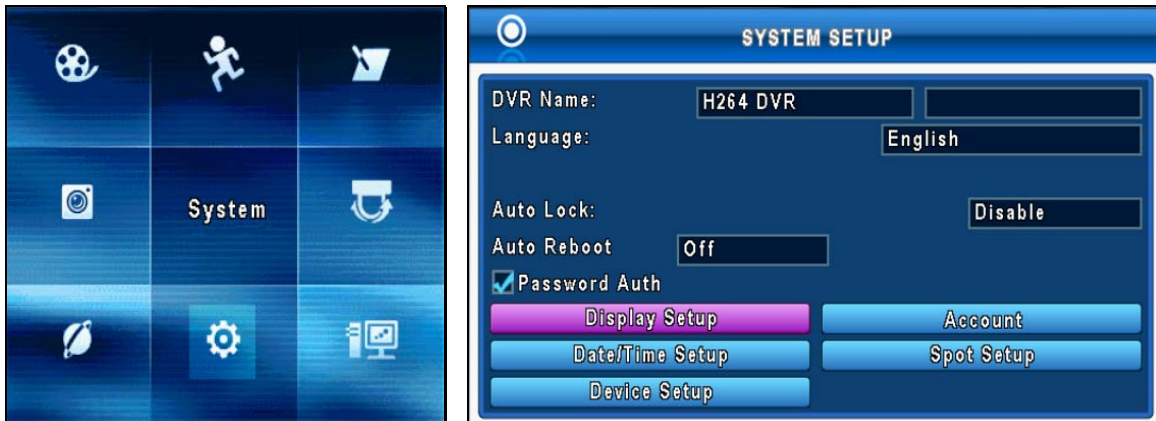

ITEM	ADJUSTMENT
DVR Name	The name of DVR will be shown when users login from remote access.
DVR Location	The location of DVR will be shown when users login from remote access
Language	Click or press ▼ to select OSD language.
Display Setup	Enter to set up Display
Date/Time Setup	Enter to set up Date/Time
Device Setup	Enter to set up Buzzer & Relay and AV Output
Spot Setup	Enter to set up Spot
Account Setup	Set each user's password and authorization including admin and 4 users.

7.1. DISPLAY SETUP



ITEM	ADJUSTMENT
Auto-Seq Interval	Set up duration time in seconds for the interval between channels under Auto-Seq mode. (Interval : 1~ 999)
Show OSD	Turn On / Off OSD display
Show DVR Status	Turn On / Off DVR illustration and record status display
Show Date/Time	Turn On / Off date and time display
Show Channel Name	Turn On / Off channel name display
Video system	Select video system type. AUTO, NTSC and PAL.
Border Color	Set up the color of border in LIVE , PLAYBACK mode. (Red, Green, Blue)

7.2. DATE/TIME SETUP




ITEM	ADJUSTMENT
Hour Format	12HOURS/ 24HOURS
Date Format	MM-DD-YY/DD-MM-YY/YY-MM-DD
Date/Time Position	Choose the position of Time and Date display
Change Date & Time	Setup time and date of DVR
Time Zone Setup	Set up GMT and Daylight Saving Time.
Internet Time Setup	Setup automatic synchronization with internet server







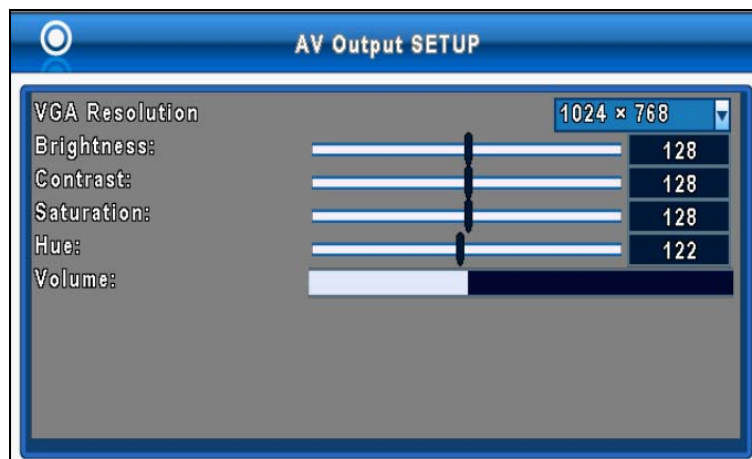

7.3. DEVICE SETUP



ITEM	ADJUSTMENT
Buzzer & Relay Setup	Into the buzzer and relay (alarm output) setup.
Key Tone	Set Enable / Disable. If Enable, the system will “beep” whenever a button is pressed on the remote control or clicked on the mouse. Default by Enable.
Buzzer	Set Enable / Disable. If Enable, buzzer will operate whenever the alarm is triggered for HDD Error, Video Loss, Motion and Sensor.
Relay	Set Enable / Disable. If Enable, relay will operate whenever the alarm is triggered for HDD Error, Video Loss, Motion and Sensor.

7.4. AV OUTPUT SETUP



ITEM	ADJUSTMENT
VGA Resolution	Set up resolution of VGA output. (800 x 600, 1024 x 768, 1280 x 1024)
Brightness	Drag the bar or press   to adjust Brightness of your camera from value 0 to 255. The default value is 128.
Contrast	Drag the bar or press   to adjust Contrast of your camera from value 0 to 255. The default value is 100.
Saturation	Drag the bar or press   to adjust Saturation of your camera from value 0 to 255. The default value is 128.
Hue	Drag the bar or press   to adjust Hue of your camera from value 0 to 255. The default value is 128. (Notice : This function doesn't support at PAL system.)
Volume	Audio Out volume under LIVE mode and recording mode can be adjusted.

7.5. ACCOUNT SETUP

The Account Setup menu is used to provide role-based permission independently setting for each user (maximum of 4 users) to access DVR over network. The default admin account and password is “**admin**” and “**000000**”

(Notice : The default password remains the same after firmware upgrade)




ITEM	ADJUSTMENT
No.	Check to activate the user's account.
Username	Set up username
Password	Set up password for each user. Password is 8-digits required and can be mixed by letters and numbers with case-sensitive. Letters can be mixed with capitals or lowercases.
Permissions	Set up Permissions for each user
Change Admin Password	Change administrator's password
Picture	Change user's picture

The Account Setup is set to provide individual user (maximum of 4 users) role-based permissions, including access to Setup menu, Network operation, PTZ function, Playback, Utility, Backup, Password expiry date and Mask on specific channels while playing back.

8. UTILITIES



ITEM	ADJUSTMENT
HDD Initialization	Select to enter hard disk initialization menu. Please stop recording before entering this menu. Enter the menu, system will show all the data (model, volume) of HDD that installed in DVR. Check the HDD you'd like to initialize then press "Start". HDD initialization is successful when the status shows "Succeed"

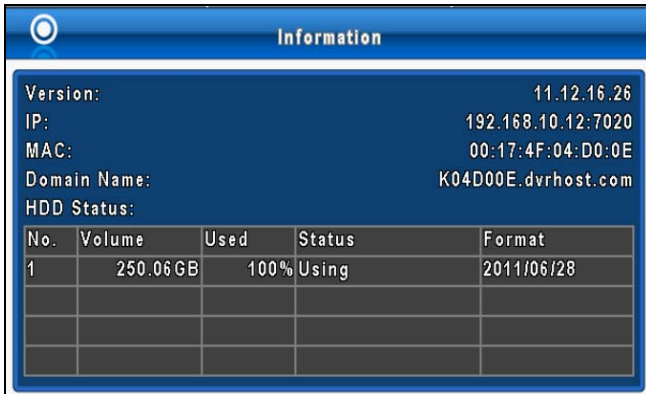
USB Initialization	Clean up all data on USB. Enter USB initialization and press YES to clean up all data on your USB. The initialization is done when it's showed "Succeed".
System Recovery	Restore system default values
Reset System Events	Reset all the recording events in DVR.
Copy Setup to USB	Copy configuration to a USB device. There will be a file named 「sdvr_conf.dat」 on your USB.
Download Setup from USB	Download configuration from a USB device into DVR.
Upgrade	Upgrade DVR through USB. Please stop recording and backup setup configuration before upgrading. System will reboot automatically when the upgrade is completed.
Information	DVR system Information including F/W version, IP address, MAC address and HDD status. 

(Notice : DO NOT TURN OFF POWER OR UNPLUG USB DEVICE DURING THE UPGRADE as it may cause incomplete firmware upgrade and damage to the DVR.)

V. BACKUP & SEARCH

1. BACKUP SETUP


User can backup any segment of recorded data in a specified time frame. To do so, either a CD R/W or storage device, like USB, must be connected to the DVR. The format of backup file is *IRF* file that can be played by both “Ifileplay” and “CMS”

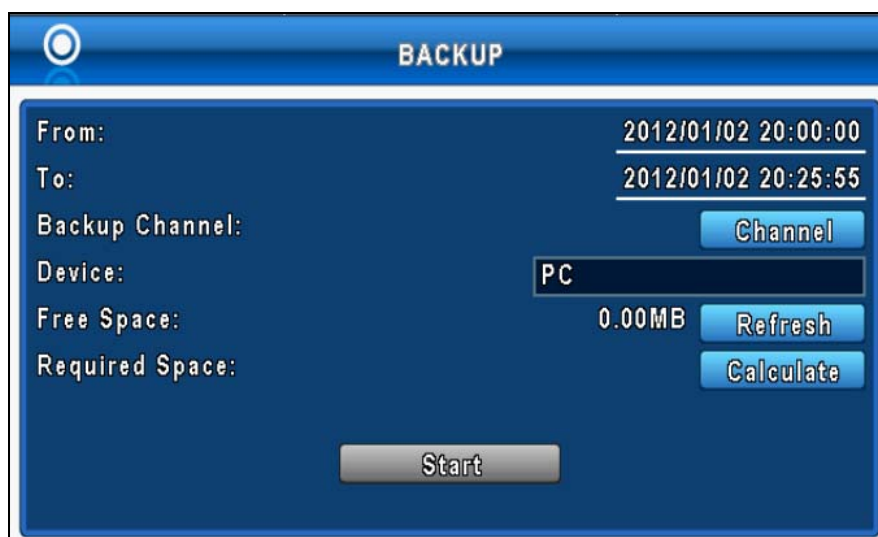

ITEM	ADJUSTMENT
From	The start time of backup file
To	The end time of backup file
Device	Select USB or PC as the backup device
Free Space	The available space in your backup device. (not available for PC backup)
Refresh	Recalculate the available space of backup device. (not available for PC backup)
Required Space	Show the size of the backup file
Calculate	Calculate the size of backup file
Start	Start backup operation. Be sure to calculate the size of backup file BEFORE operating backup.


(Notice : Do not unplug the USB device or turn off the DVR during the backup process to avoid unrecoverable error.)

2. SEARCH SETUP

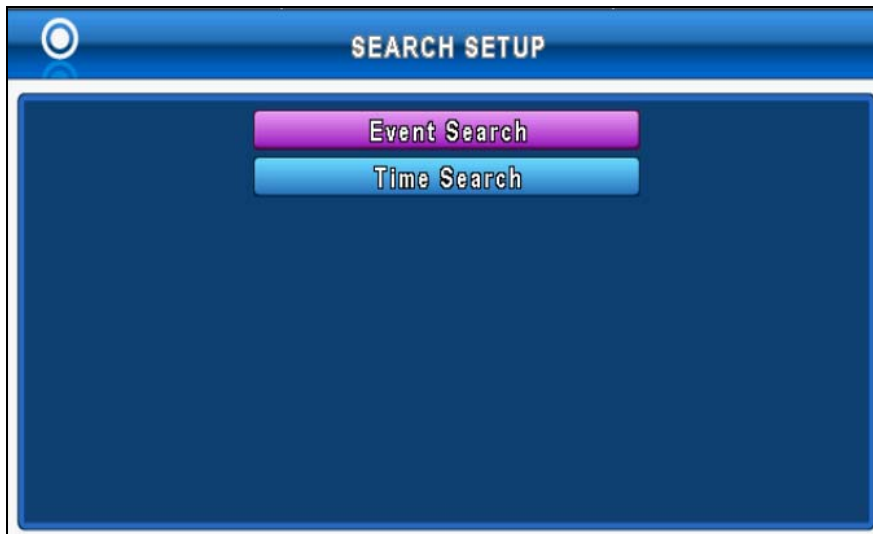

ITEM	ADJUSTMENT
Event Search	Enter event search menu to playback by event log.
Time Search	Enter time search menu to playback data by Time search calendar.
File Search	Enter file search menu to playback backup recording data by external device, such as USB or external HDD.

2.1. EVENT SEARCH

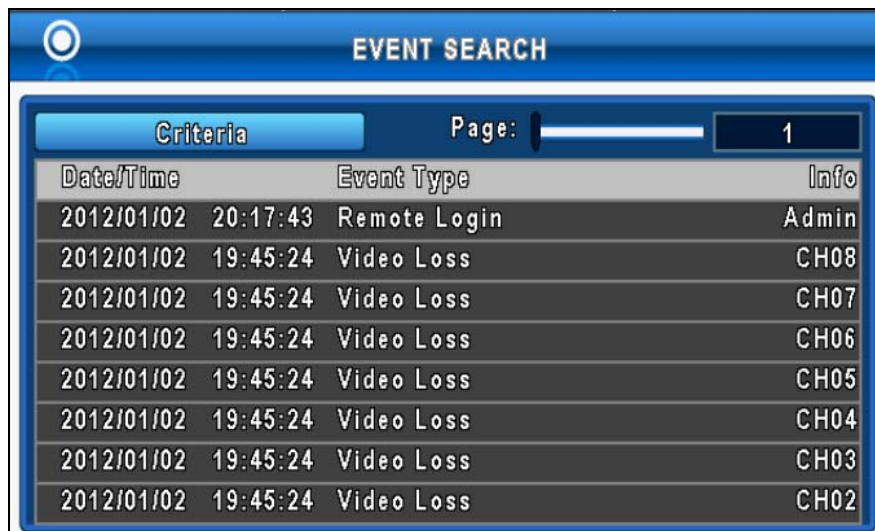


If there is recording data for an event, press “enter”, or left click on mouse to playback the recording data.

ITEM	ADJUSTMENT	
Criteria	Setup conditions of event search	
Page	Switch between pages of events	
Date/Time	Date/time when event occurred.	
Event Type	Event type, defined as following	
	MOTION	Motion Detected
	Video Loss	Video Loss
	Remote Login	user log-in over the network
	Remote Logout	user log-out over the network
	Power On	DVR Power on
	HDD Full	HDD Space FULL
	HDD Error	Detect HDD error
	Reboot	DVR Reboot
Info	The channel where event occurs or login user	



The amount of events can be numerous. Therefore, you can facilitate event sorting by setting up “criteria”. Setup “start time” and “end time” for event search, then the search result will be limited to this specific period of time. Only checked events and channels will be sorted in event search.

2.2. TIME SEARCH

TIME SEARCH can search for the specific time of recording data to playback. Press “Enter” or left click on the desired date to playback. Note that dates with recording data are marked with a red square “”. System will start playing back according to the date you selected. Calendar will be shown by using mouse to click on “year” and “month”.



Click “date” to display recording time of that specific date with time bar. You can change time (hour/minute/second) or click on a specific time of time bar by mouse then press “ok”. DVR will playback the selected recording data



Specifications		4CH / 8CH
Video Input		4 (8)
Video Output		VGA, SPOT-OUT, Composite (Selectable)
Compression		H.264
Live Display Resolution		NTSC 720*480, PAL 720*576
Alarm In/Out(Relay)		4 / 1, 8 / 1
Operating System		EMBEDDED LINUX
System Control		IR Remote Controller, Remote software, Mouse
Live Display Speed		Real Time
Maximum Recording Speed	NTSC 4(8)	720x480 : 120fps (120fps), 720x240 : 120fps (240fps), 260x240 : 120fps (240fps)
	PAL 4(8)	720x480 : 100fps (100fps), 720x240 : 100fps (200fps), 260x240 : 100fps (200fps)
Audio Record		1 IN, 1 Out
Features		
Display		Brightness, Contrast, Color Adjustment Per Channel
Display Mode		Picture In Picture, Zoom In (Digital, 2X ~ 8X)
Recording Mode		Manual, Schedule, Alarm, Motion
Recording Method		5 Levels of Compression Rate / Record Frame Rate Adjustment
Recording Adjustments		Pre-Alarm: 10 sec/ Post-Alarm: 1 sec. ~60 sec.
Motion Detection		Per Channel 22*15 Grids (SET)
Search Mode		Date & Time, Camera , Alarm / Motion
Playback Modes		Forward & Reverse: Pause, Slow playback, 2X, 4X, 8X, 16X, 32X, 64X
Multi-tasking		Simultaneous Live Display/ Playback, Record or Back-up, Remote Transmission
Mobile Application		Symbian, Win Mobile, Black Berry, iPhone, Android phone
Watermark		Provided
Back Up		USB Flash Memory Stick, External HDD
Interface		RS485, Ethernet(10/100 Base-T), USB 2.0
HDD		1 INTERNAL HDD
Network		LAN, WAN, Internet,
Remote		Internet Explorer

WEEE Symbol Information



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)


This marking shown on the product or its literature, indicates, that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Appendix 2. EMS SOFTWARE

EMS is a central management software that allows you to view and manage up to **300** DVRs.

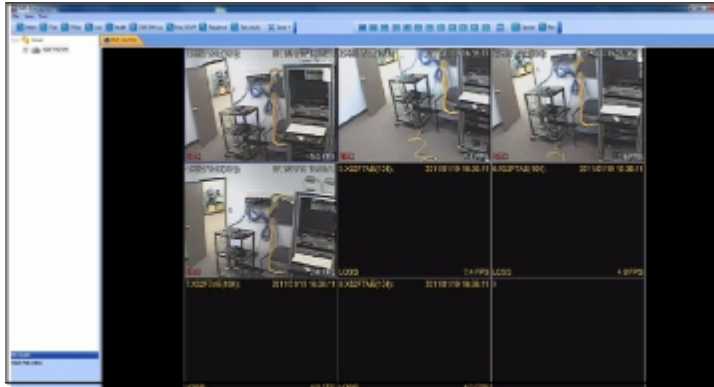

System Requirements

Your system must meet the system requirements below:

Minimum system requirements

- Windows XP SP 1
- Pentium 4, 2.4Ghz
- 512 MB RAM
- 64 MB AGP video card
- 1024 x 768 monitor resolution
- Direct X 7.0
- 100MB Ethernet LAN
- 10 GB free storage space

Recommended system requirements

- Windows XP SP 1
- Pentium 4, 3.0 Ghz
- 1GB RAM
- 256 MB, PCI-E video card
- 1600 x 1200 monitor resolution
- Direct X 9.0
- 100MB Ethernet LAN
- 40 GB free storage space

Prerequisites


- DVR must have access to the Internet or Local Area Network (LAN)

Installing EMS


To install EMS:

1. Insert the software CD, and click the **Install EMS**.
2. Double-click the EMS setup file.


NOTE: You may receive installation warnings. This is normal. Accept the security warnings to continue.

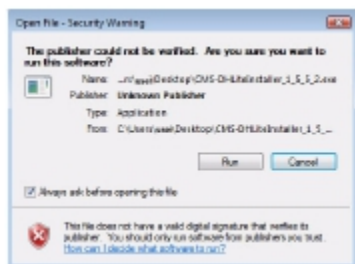

3. Follow the on-screen instructions to install the software.

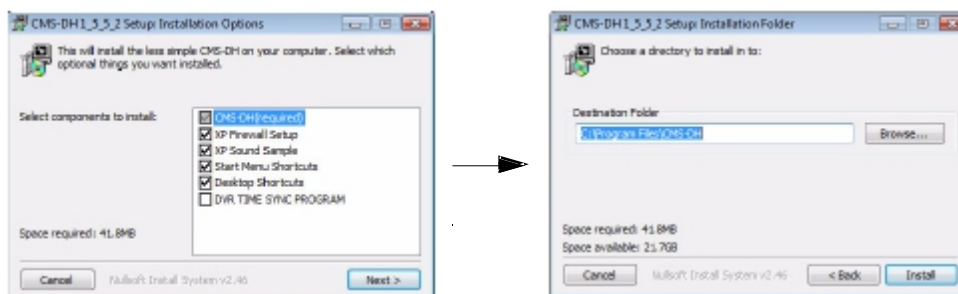


4. Click **Yes** to restart the computer when prompted.

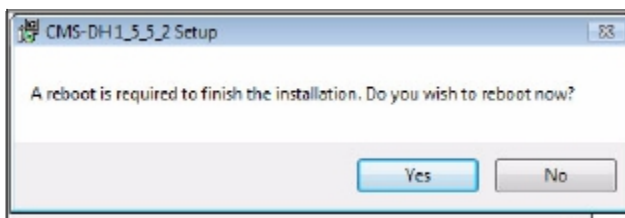

Starting EMS

To start EMS:

- Double-click the EMS icon () on the desktop.
- The default user ID and password is "admin" and "0"




Adding a DVR from the local area network (LAN)


Once you open EMS, you can add a DVR.

To add a DVR to EMS:

1. Click **Device**.

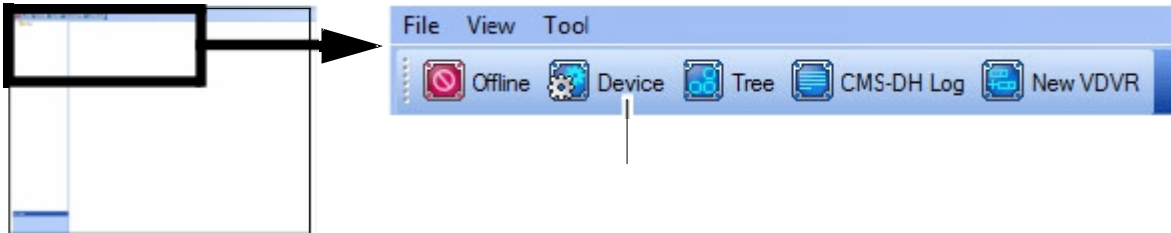

2. Click **Scan** to locate connected DVRs on the network.

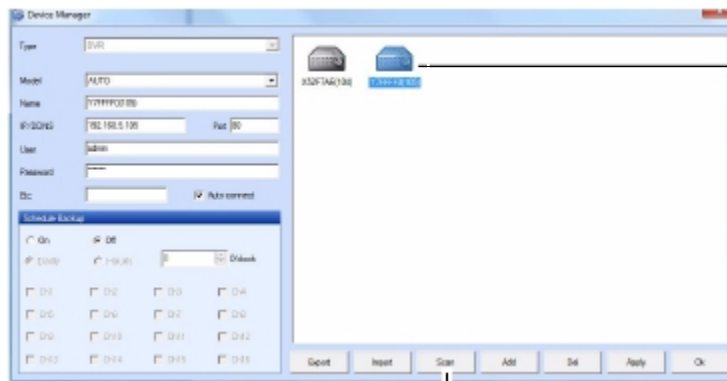


DVRs that were discovered on the LAN

NOTE: By default, when adding a DVR from the LAN, the DVR name will automatically be named the last 3 digits of the IP address.


Scan button

- Click on the DVR you wish to add to EMS, and then click **Apply>OK**.
· The DVR appears on the left panel.

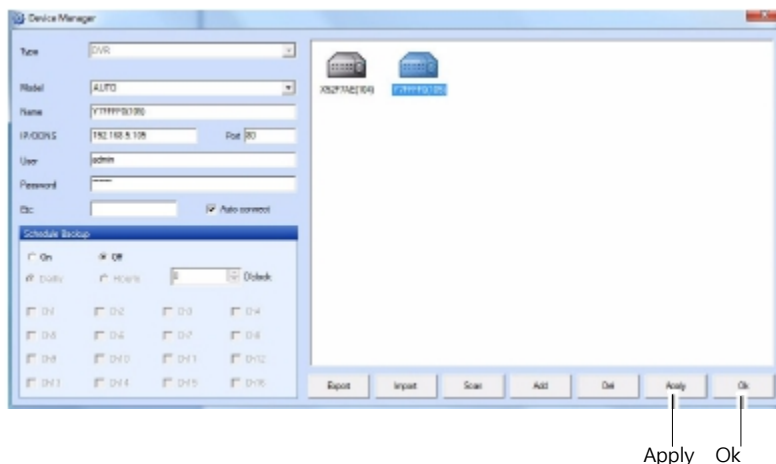


If you have changed the default password of the DVR, you must select the DVR from the list, then manually re-enter the new password in the Password field, and then click Apply and then OK.

- Click on the DVR you want to connect, and click the **Offline** button.

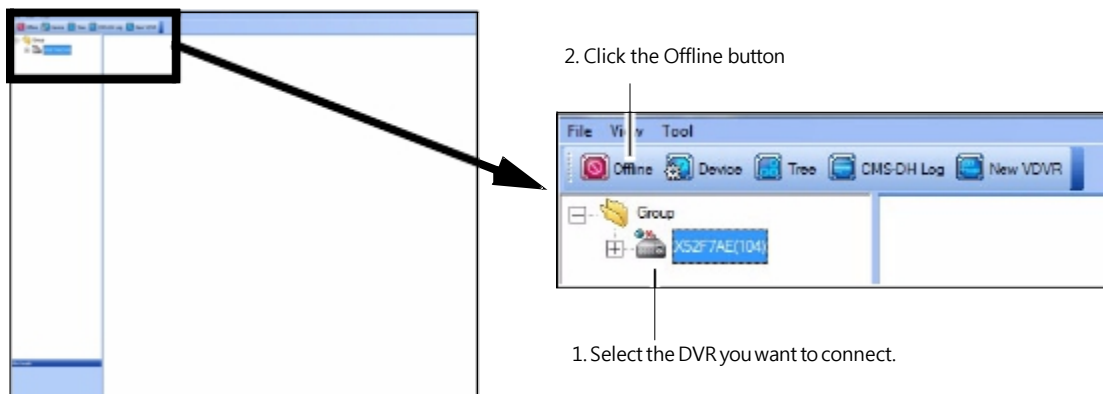

- Double-click the name of the DVR to connect to the system.

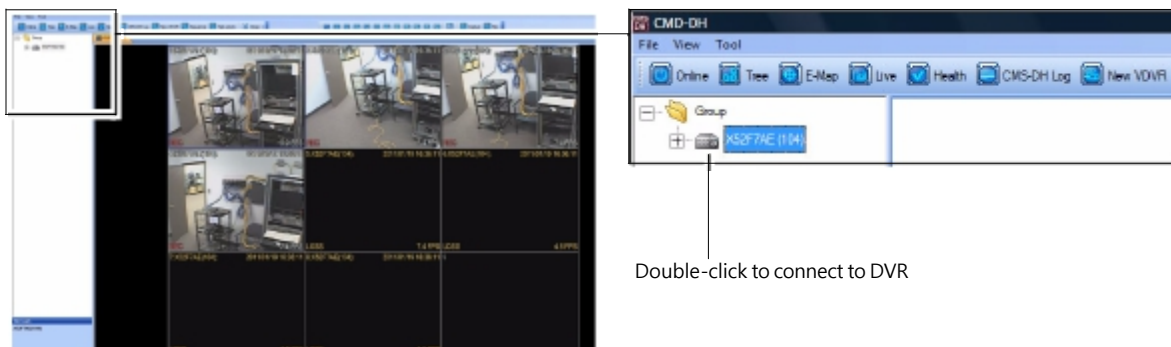

NOTE: To add another DVR from the network, you must click the **Online** button to disconnect the DVR. Then repeat steps 1-5 to add the new DVR.

Adding a DVR using a DDNS address


If you have DVR systems that have DDNS set up, you can add them to EMS.

Prerequisites


- Check “Domain Name” on DVR menu (Utility / Information)

To add a DVR using a DDNS address:


1. Make sure the DVRs have been disconnected from EMS. Click **Device**.

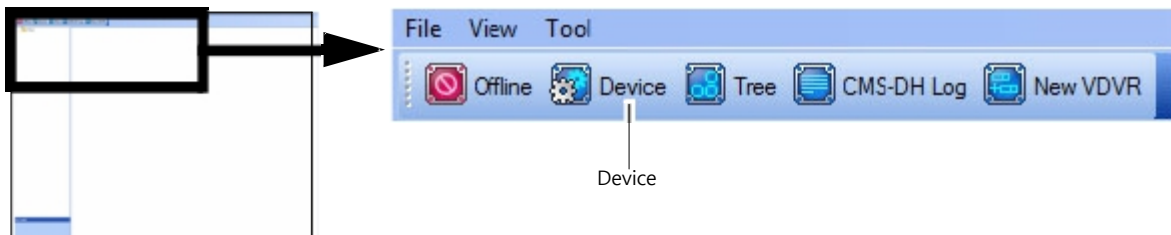


2. In the Device manager window, click **Add**.

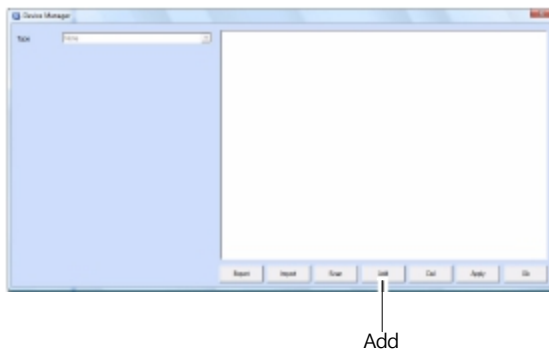


3. Beside the Type drop-down menu, select **DVR**.

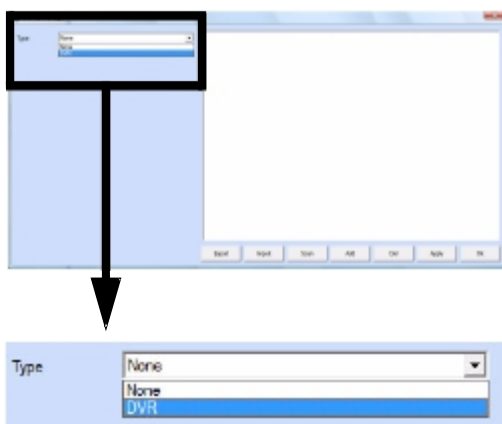


4. Enter the following into the blank fields:
 - **Name:** Enter the DVR name of your choice.
 - **IP/DDNS:** Enter the DVR's DDNS address (for example K045G7C.dvrhost.com)
 - **Port:** Enter the DVR's port number
 - **User:** Enter the DVR's user name (by default, **admin**)
 - **Password:** Enter the DVR's password (by default, **000000**)

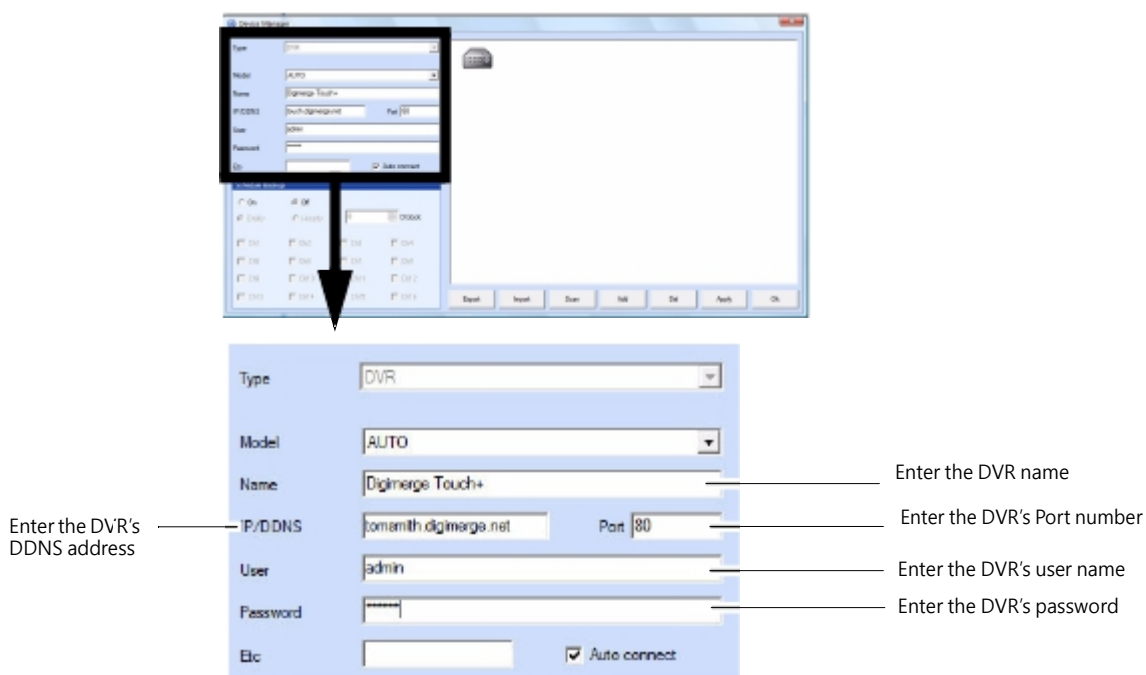


5. Click **Apply>Ok**.

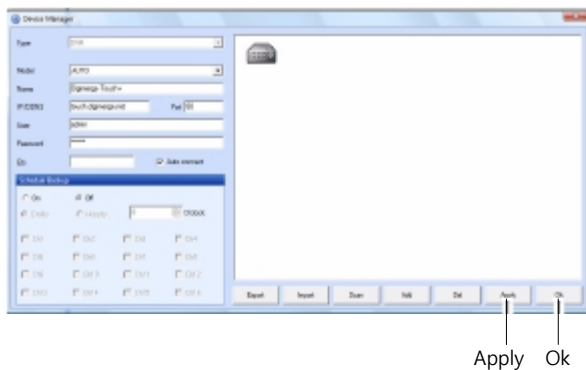

6. Click the **Offline** button to connect to the DVR. Double-click the DVR icon to begin viewing.

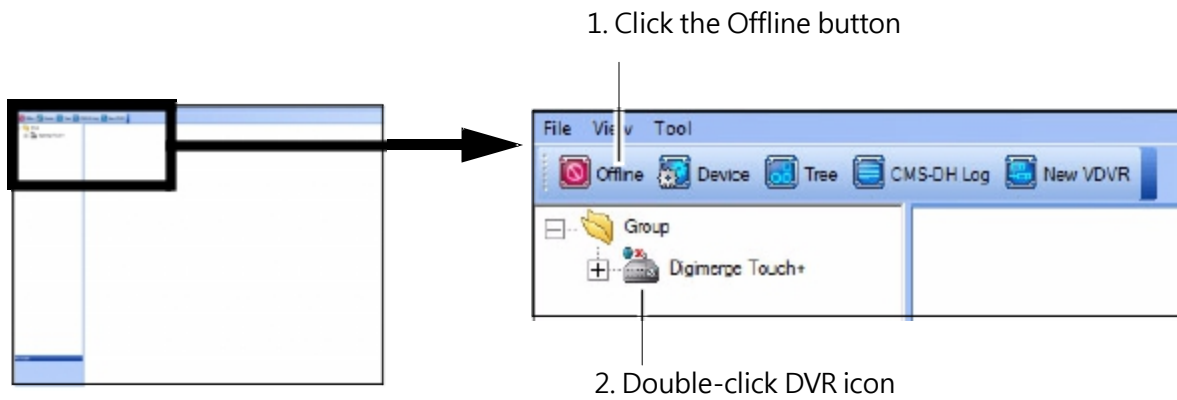

Final Result

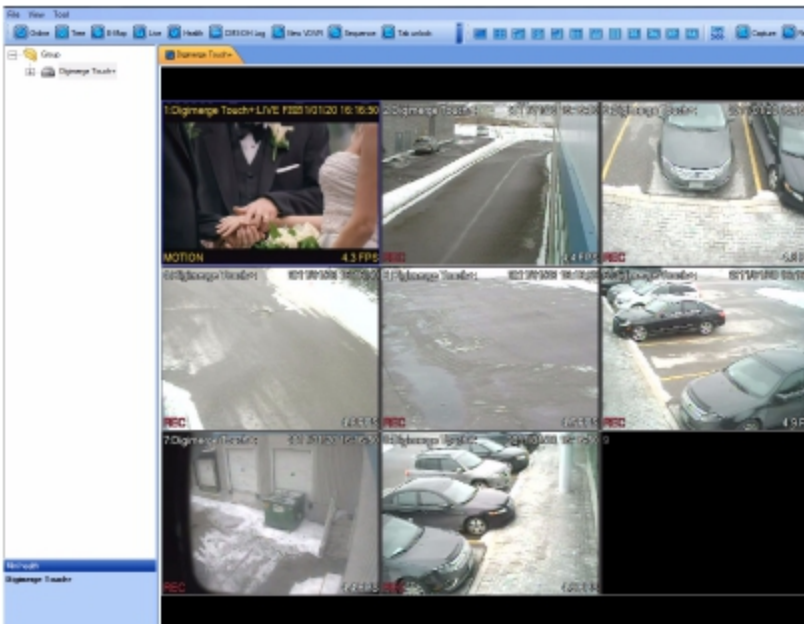

Once you have added the DVR, you can add multiple DVRs and view them in the tab. To switch DVR, click on the tabs near the top of the window.




Click the tab to switch DVR

Adding a Virtual DVR

A virtual DVR allows you to add video sources from multiple DVRs, into one main window.

Example

In the example below, multiple video sources from two DVRs are grouped into the Virtual DVR.

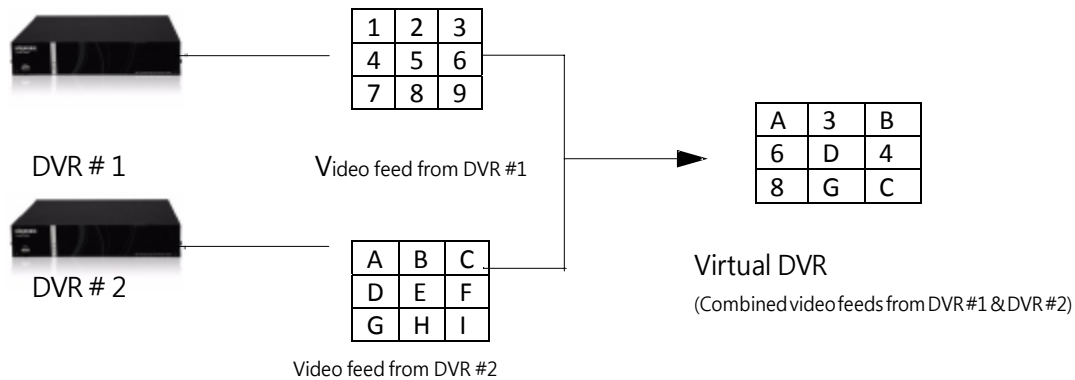


Prerequisites


- Ensure the DVRs are online, and connected to EMS.

To add a Virtual DVR:


1. Click the **New VDVR** button ().

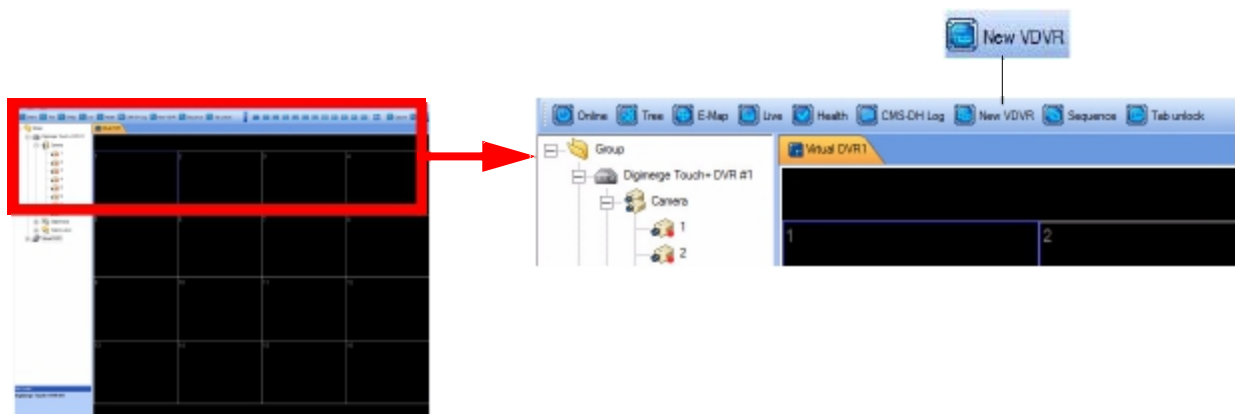

2. Double-click the virtual DVR icon in the tree menu on the left.

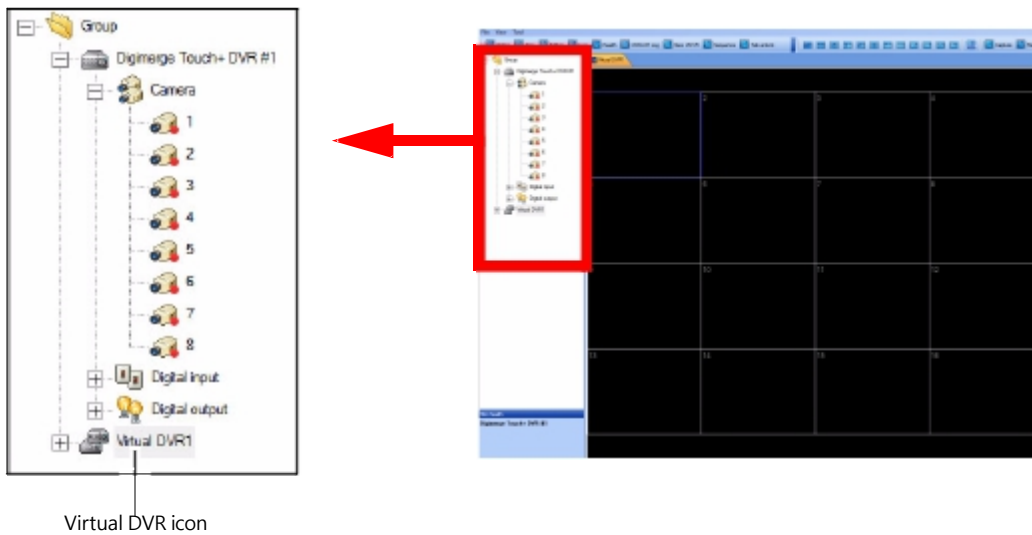


3. Click the + symbol to expand the DVR menu tree.

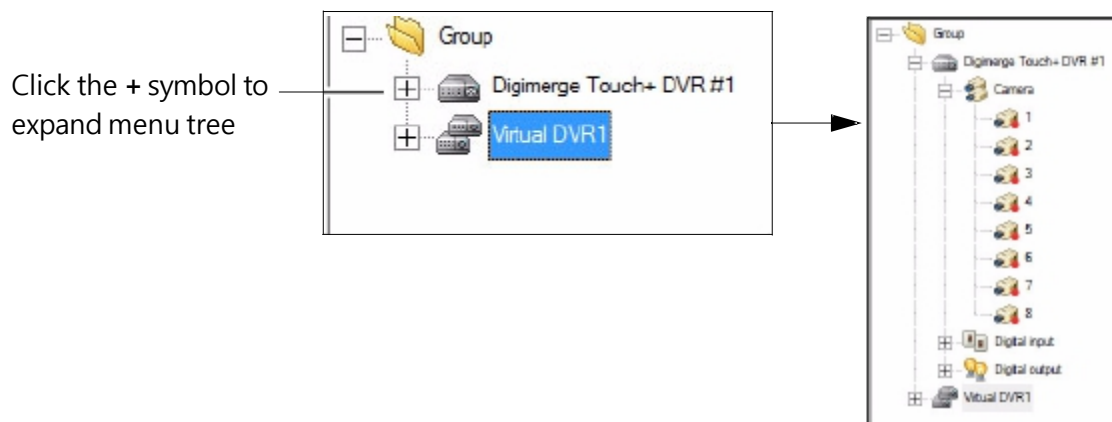

4. Drag the desired camera into the Virtual DVR window.

NOTE: You can drag the camera into any desired channel in the virtual DVR.

Example

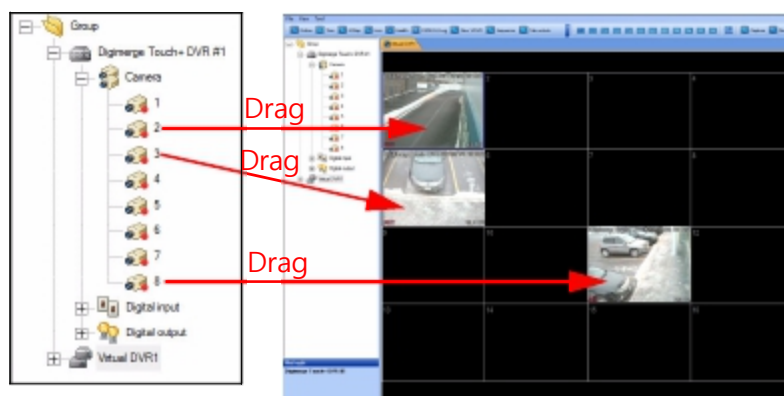


5. Repeat step 3-4 as required for different DVRs.

Creating New Group Folders & Sub folders

Creating group folders and sub-folders helps you organize multiple DVRs. For example, you can create a new folder for each different DVR.

To create group folders:

1. Right-click on the Group folder, then click **New Group**.

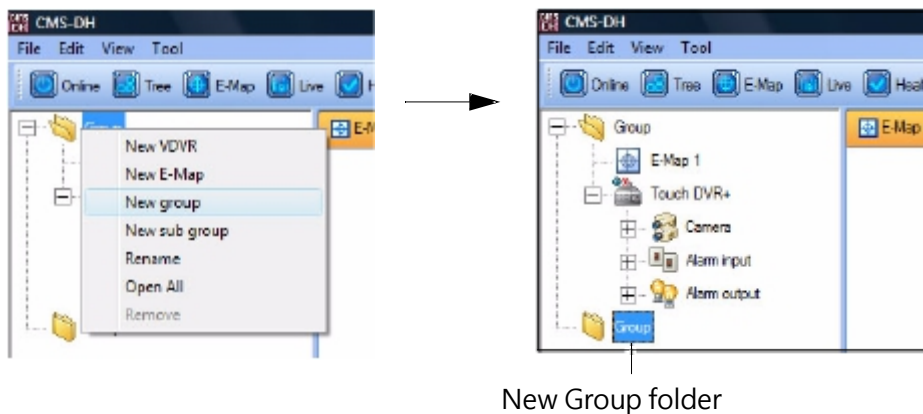

2. Drag the desired DVR into the new folder.


To create a sub-group:


- Right-click on the Group folder, then click **New sub group**.

Configuring General System Settings

To configure general system settings:

1. Open EMS to access the Login window and then click **Setup** (Or, click **File > Setup** once you are logged in to EMS)

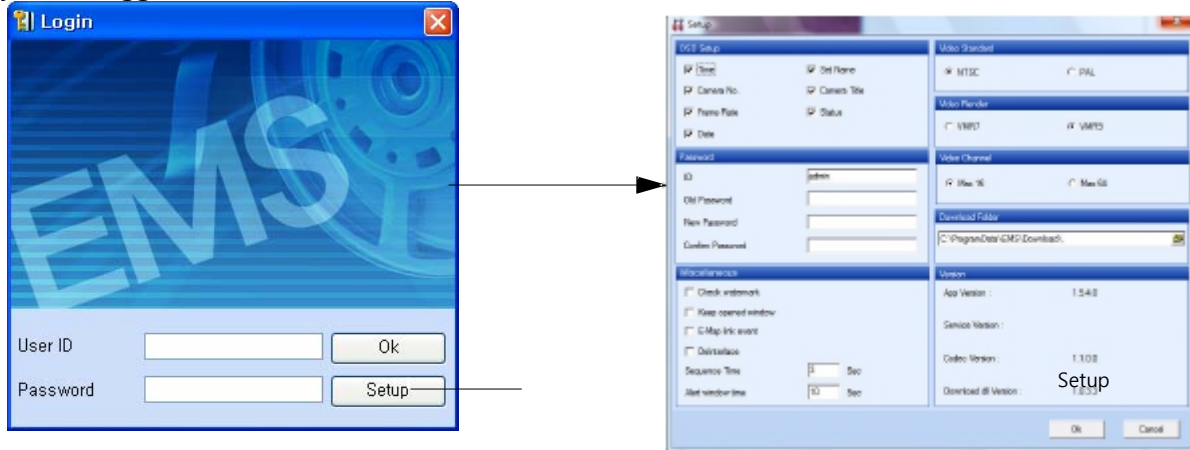

2. Configure the following in the Setup menu:
 - **OSD Setup:** Configure the on-screen display items that you want to appear in the channel (i.e. camera name, time, frame rate etc.).
 - **Password:** Change the EMS login name and password. Enter your desired ID (user name) and password, and then click **OK** to save your settings.
 - **Miscellaneous:** Select the items you wish to enable:
 - **Check Watermark:** Not Supported
 - **Keep Opened Window:** Automatically re-opens the windows that were closed after you restart the program.
 - **E-Map Link Event:** When selected, the E-map will open pop-up windows when an event occurs (setup required).
 - **De-interlace:** Not Supported
 - **Sequence Time:** Enter the sequence time of each DVR.
 - **Alert Window Time:** Enter the amount of time the Alert window remains on screen.
 - **Video Standard:** Select from NTSC or PAL video output.
 - **Video Render:** Select the DirectX type of your system. Select VMR7 if your system uses Direct X 7.0. Select VMR9 if your system uses Direct X 9.0.
 - **Video Channel:** Select the maximum amount of DVR channels that the software displays. Choose Max 16 for 16 maximum channels, Max 64 for 64 maximum channels.
 - **Download Folder:** Select the download destination on your hard drive. The download folder stores saved videos and images. Click the browse button () to select the default download directory.

Adding Users

You can add multiple users to EMS, specifying the DVR menus that each user is allowed to access.

To add a new user:

1. Log in to EMS.
2. Click **File>EMS Account**.
3. Enter the following:
 - **ID:** Enter the desired user name.
 - **Password:** Enter the desired user password.
 - **Confirm Password:** Re-enter the user password.

User info		Uses DVR List
ID		<input type="checkbox"/> Digimerge Touch+ DVR #1
Password		
Confirm Password		

Windows	Function	Uses
Plan	Visual DVR editing	<input type="checkbox"/>
Plan	Device control	<input type="checkbox"/>
Plan	Device setup	<input type="checkbox"/>
Plan	Download	<input type="checkbox"/>
Plan	Playback	<input type="checkbox"/>
E-Map	View	<input type="checkbox"/>
E-Map	Editing	<input type="checkbox"/>
Device Manager	View	<input type="checkbox"/>
Live	Local recording	<input type="checkbox"/>
Live	PTZ control	<input type="checkbox"/>
Post event action	View	<input type="checkbox"/>
Post event action	Editing	<input type="checkbox"/>
Health Report	View	<input checked="" type="checkbox"/>
Visitor Log	View	<input checked="" type="checkbox"/>
EMS Log	View	<input checked="" type="checkbox"/>
Log	View	<input checked="" type="checkbox"/>
POS data search	View	<input checked="" type="checkbox"/>

Buttons: Add, Del, Apply, OK, Cancel

4. Under the DVR list, click the checkbox to select the DVR the user will have access to.
5. Under 'Uses' click the checkbox to select the type of menus the user will have access to.
6. Click **Add** and then click **OK** to save your settings.

To remove a user:

1. Log in to EMS as the administrator (default user name: **admin**, default password: **0**)
2. Click **File>EMS Account**.
3. Click the user name that you wish to remove.
4. Click the **Del** button to remove the user.

Recording Video to the hard drive

EMS allows you to record video to your local hard drive. The amount of video that you can record depends on the size of your computer's hard drive.

To record video:

1. During live view, click the **Rec** button (). The Rec button turns red.


NOTE: If you want to capture a single channel of video, double-click the channel to view the channel in full screen mode, then click the **Rec** button.

NOTE: If you want to capture all channels, ensure that you are viewing the DVR in split screen mode, and then click the **Rec** button.



2. Click the **Rec** button () again to stop recording.

NOTE: The file is saved into the default save directory of the EMS software. To locate the save directory of the video files, click **File>Setup**, and look under Download Folder to determine where the file is saved.

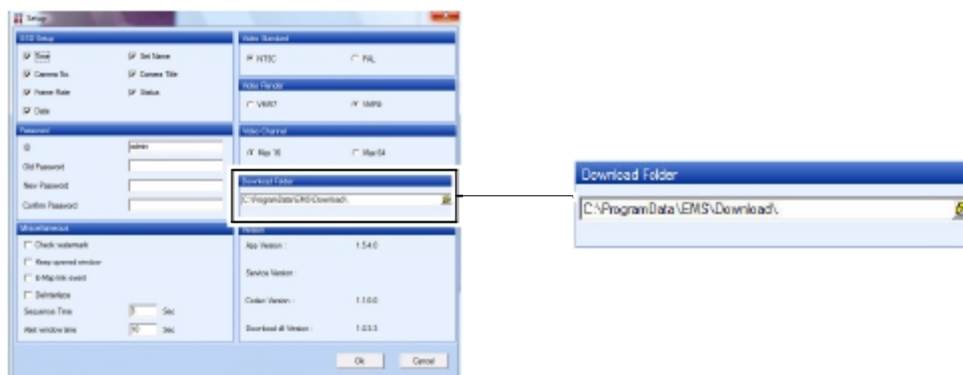


Playing back recorded video


The video is saved as a proprietary file that is playable only by EMS.

To play back previously recorded video files:


1. From the main window, click **File>File Playback**.

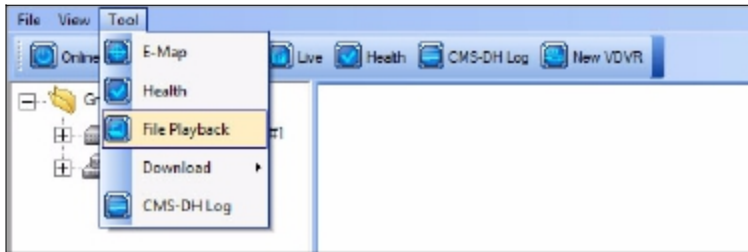


2. Click the **Open** button.

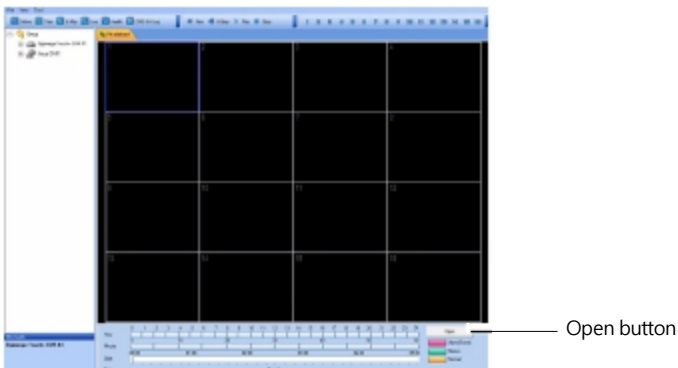

3. Select the desired file you wish to play and click **Open**.

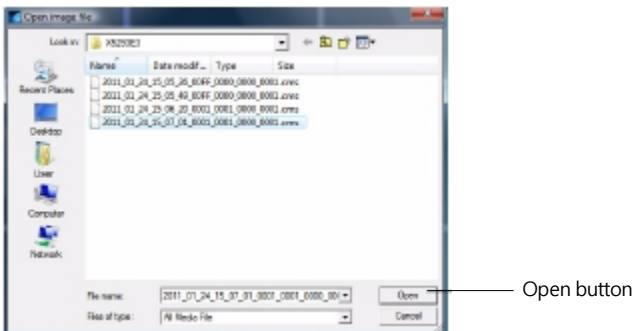

4. Use the video playback controls to watch the video.

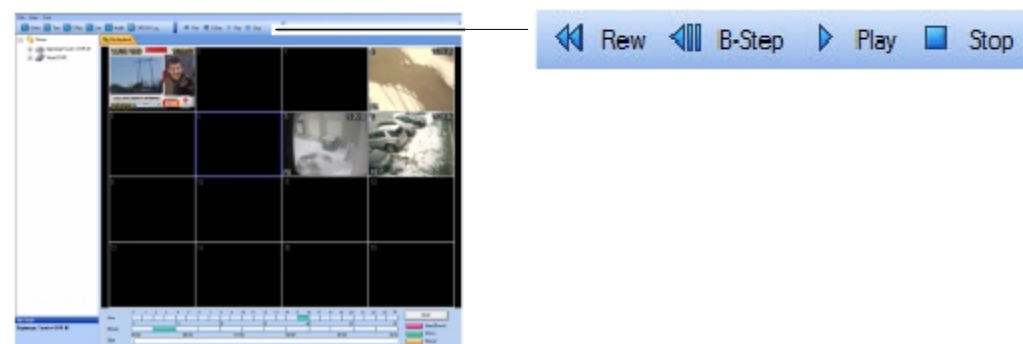

Remote Search


Remote search allows you to search for archived video on the DVR. **Note that only Normal Recording mode is supported for support search. Motion and Alarm search is not supported.**



Prerequisite


- Ensure you are connected to the DVR that you wish to search from.

To search for video:

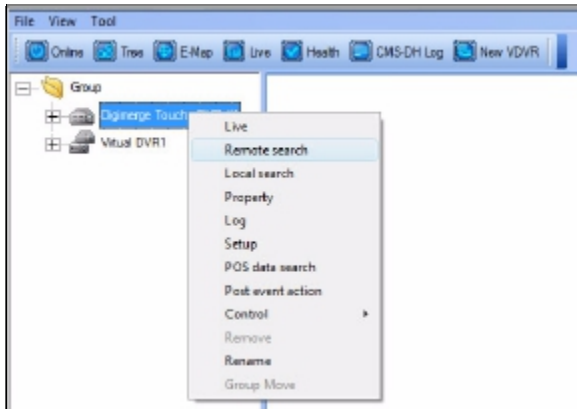1. Right-click on the DVR that you wish to search video from, then click **Remote Search**.




2. To search for the video:
 - a. Click   to select the desired month.
 - b. Select the date of the video.
 - c. Select the hour.
 - d. Select the minute.

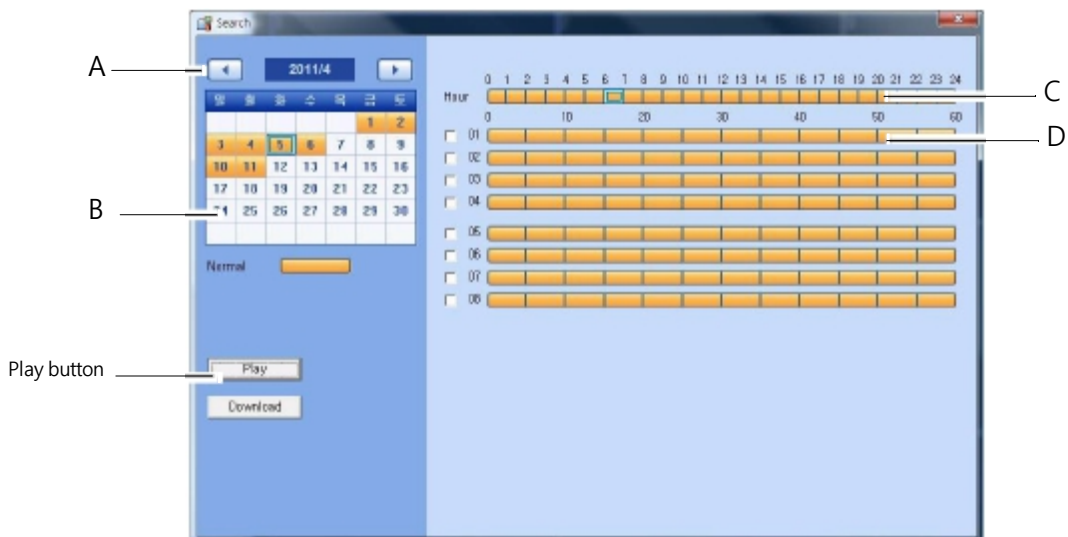

3. Click the **Play** button to begin watching the video.

Video Playback Controls

Once the video begins to play, use the video controls to manipulate video playback.

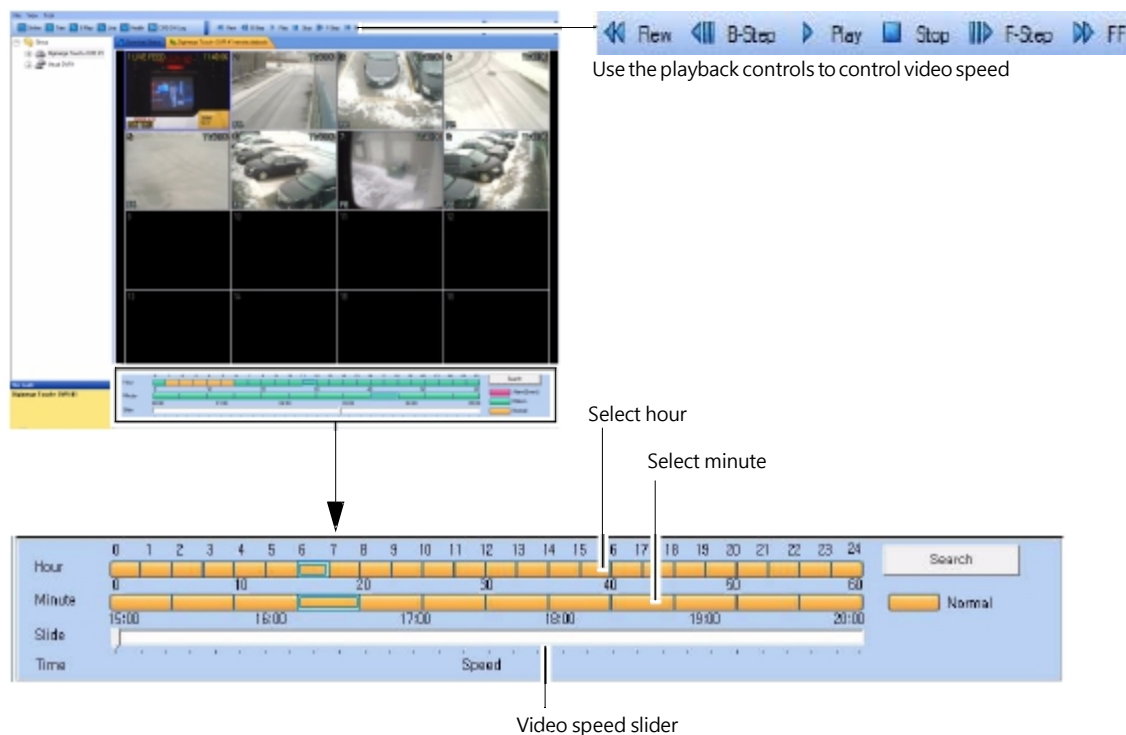

Local Search


Local search allows you to search for video stored locally on the computer hard drive.

Prerequisite



Ensure you are connected to the DVR that you wish to search from.


To search for videos stored on your hard drive:

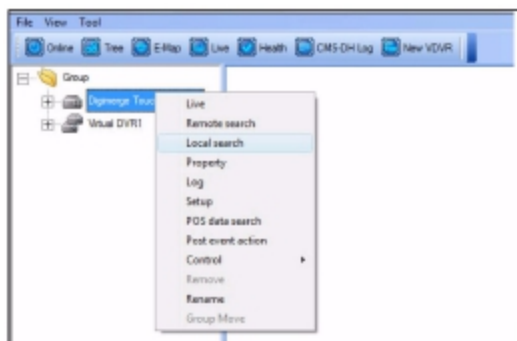1. Right-click on the DVR that you wish to search video from, then click **Local Search**.



2. To search for the video:

- Click   to select the desired month.
- Select the date of the video.
- Select the hour.
- Select the minute

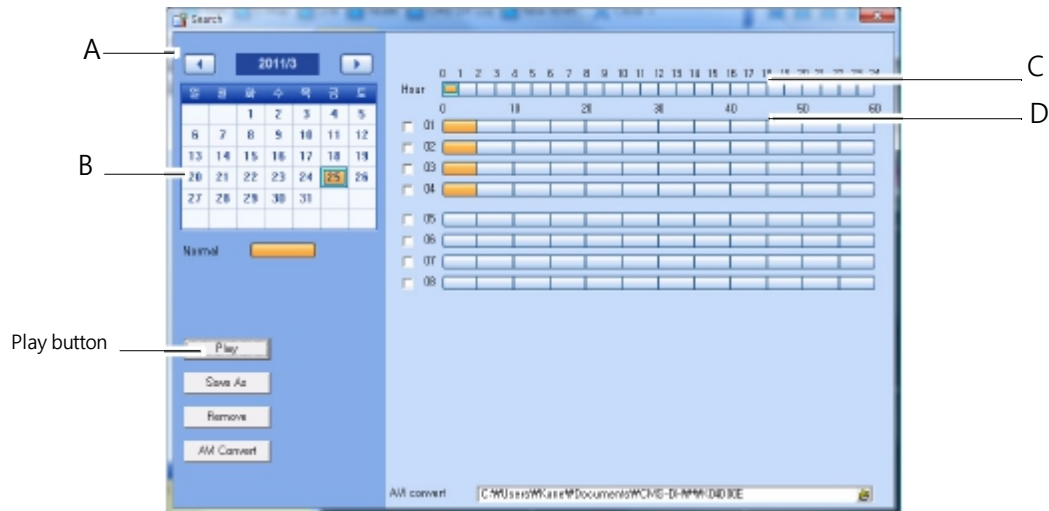


3. Click the **Play** button to begin watching the video.

Saving Video Files

You can save the proprietary video files to your local hard drive from the Search menu. The video file ends in a **.cms** extension, and requires EMS for playback.

To save video files from the search menu:

1. Select the month, date, and time of the video.

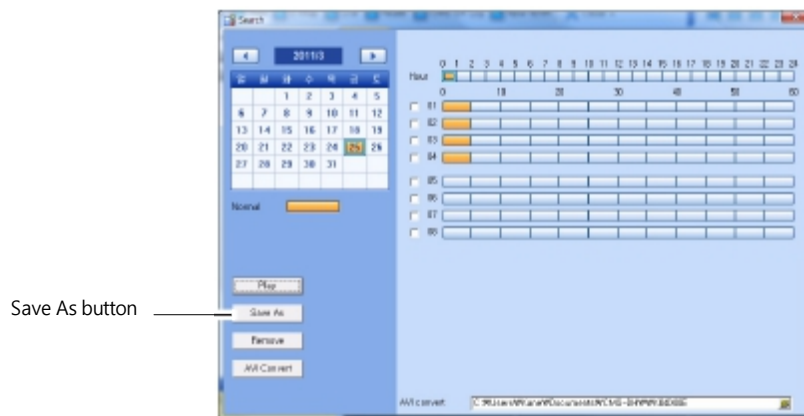

2. Click the **Save As** button.

3. Select the desired save directory, and click **OK** to save the file.

Converting video files to AVI


Converting proprietary **.CMS** video files to AVI allows you to play the video on a computer that does not have the EMS software.


Prerequisite

- Make sure that you are in the Local Search menu (Right-click on the DVR, and click **Local Search**)

To convert video files to .AVI:

1. Select the month, date, and time of the video.

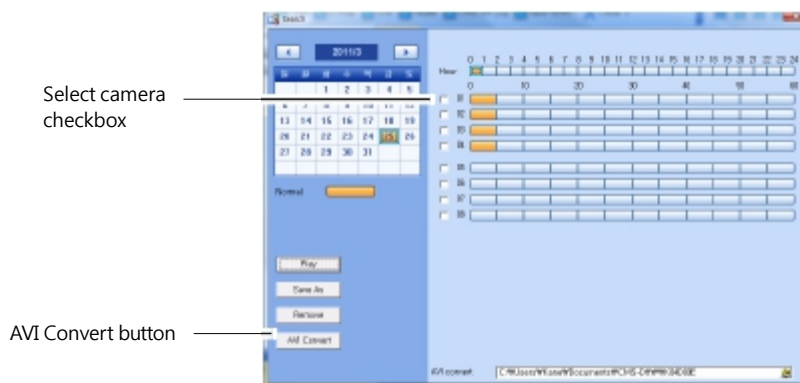

2. Select the checkbox beside the camera you wish to back up video from.
3. Click the browse button () and select the file output directory.
4. Click the **AVI Convert** button.
 - EMS converts the file, and stores it in the output directory.



Click the browse button to select save directory

Schedule Backup


You can schedule regular backup of video to your local hard drive. The schedule can be configured to back up 24 hours of video, or during a specified time only.


Prerequisite

- 3GB of hard drive space (backup will not function if there is less than 3GB)
- DVRs must be in offline mode


To configure Schedule Backup settings:

1. Click the DVR that you wish to configure.

2. Click the Device button ( Device).

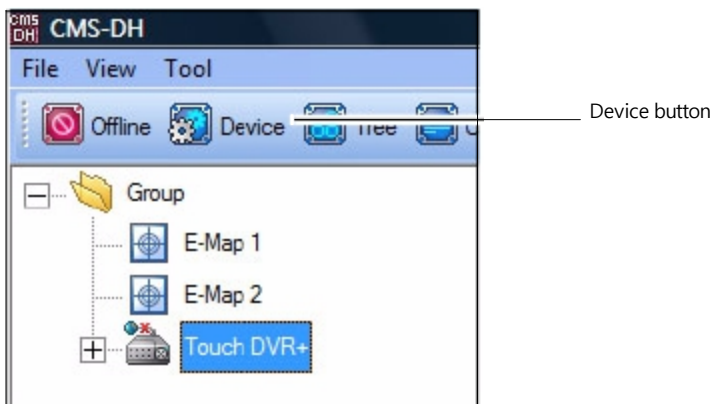


3. Select **On** to enable schedule backup.

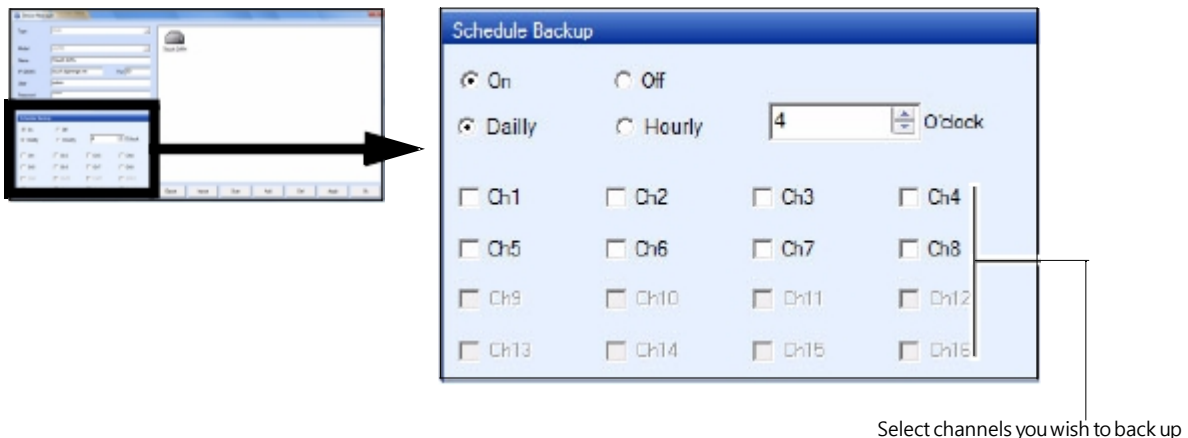

4. Select **Daily** to back up 24 hours of video to your hard drive. Go to step 6.
 - Select **Hourly** to back up every hour of video to your hard drive. Go to step 5.

5. In the Minute drop-down menu, enter how many minutes the system should wait before recording. For example, if you enter 10 minutes, the system will backup video footage from 8:10 a.m to 9:10 a.m.
6. In the Hour drop-down menu, enter the time you wish to begin backup. For example, if you enter 5:00pm (05:00hr), the backup will start at 5:00pm, and end at 4:49am (the next day). Enter the hourly time in 24-hour format.
7. Select the channels that you wish to enable schedule backup.

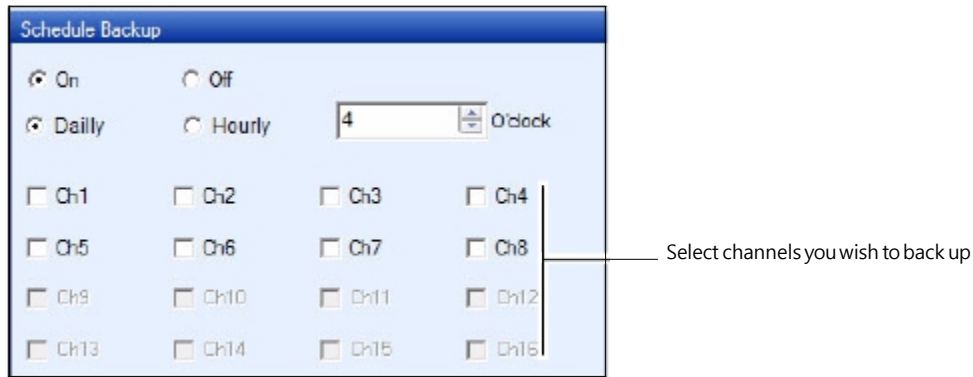


8. Click **Apply** and then click **OK** to save your settings.

Taking Screen Captures

You can capture screen shots as Jpeg or Bitmap images (JPG or BMP).

To take a screen capture:

1. During live view, click **Capture** ().

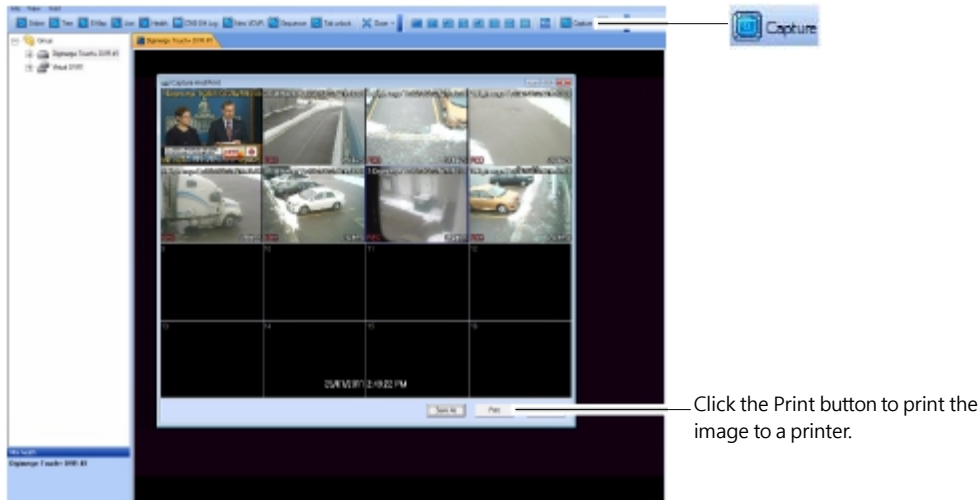


2. Click the **Save As** button. Enter the desired picture name, and select the desired save directory, and then click **Save**.
NOTE: To take a screen capture of a full-screen, double-click the desired channel, then click the **Capture** button.

Viewing File Download Status

To check the download status of your video files:


1. Connect to the DVR you wish to check the video status on.
2. Click on **Tools>Download>Status**.

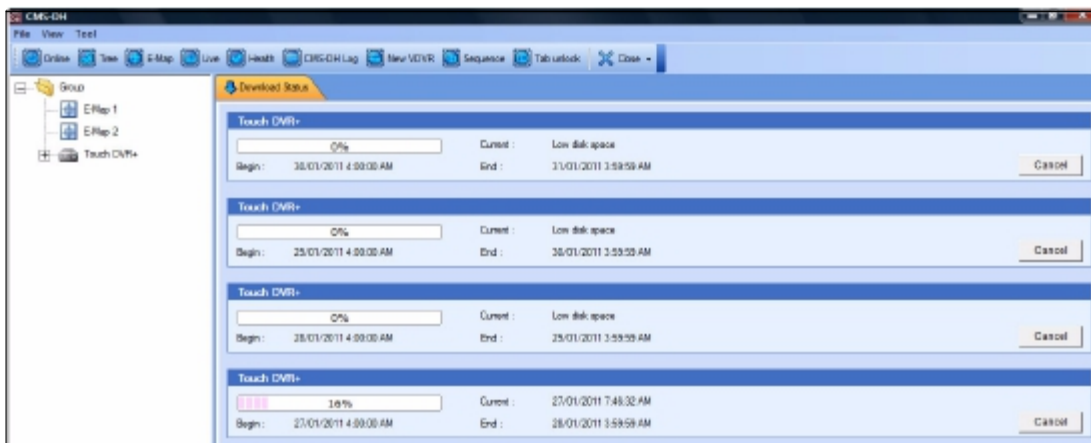


3. To cancel the download, click **Cancel**.

Changing viewing modes

To change the viewing modes of EMS:

1. Log in to EMS, and connect to a DVR.
2. Click () to change the viewing mode (single-channel, quad-channel etc).

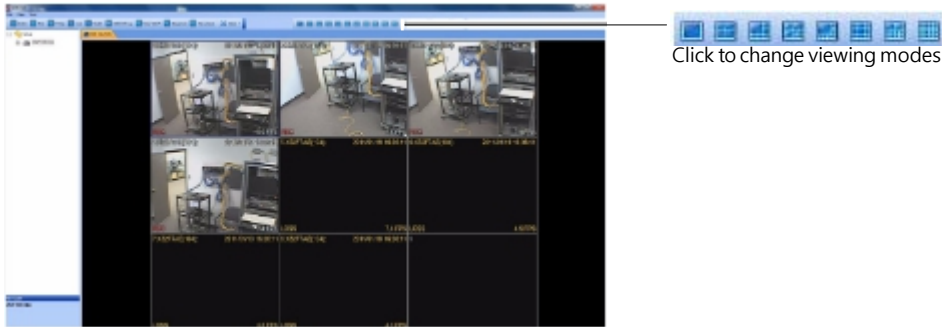

Sequencing


If you monitor multiple DVRs, you can have each tab change continuously. This process is called sequencing. You can perform sequencing as long as you have two or more DVRs. Virtual DVR's work with sequencing as well.

Prerequisite

- Log in to two or more DVRs

To start a sequence:

- Click the **Sequence** button ( Sequence).

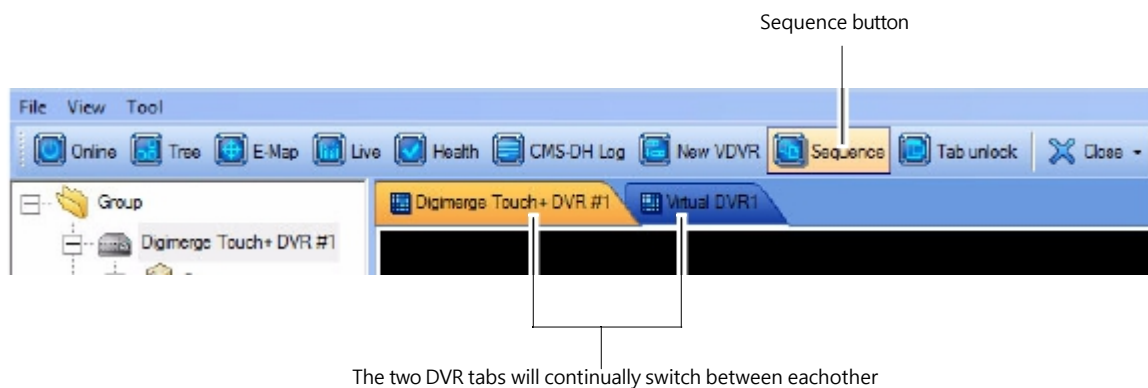


NOTE: To change the sequence time, click **File>Setup**. Under "Miscellaneous", enter the desired sequence time in seconds, and click **Ok**.

E-Map

The E-Map feature allows you to visually map your cameras over a Jpeg image.

Example

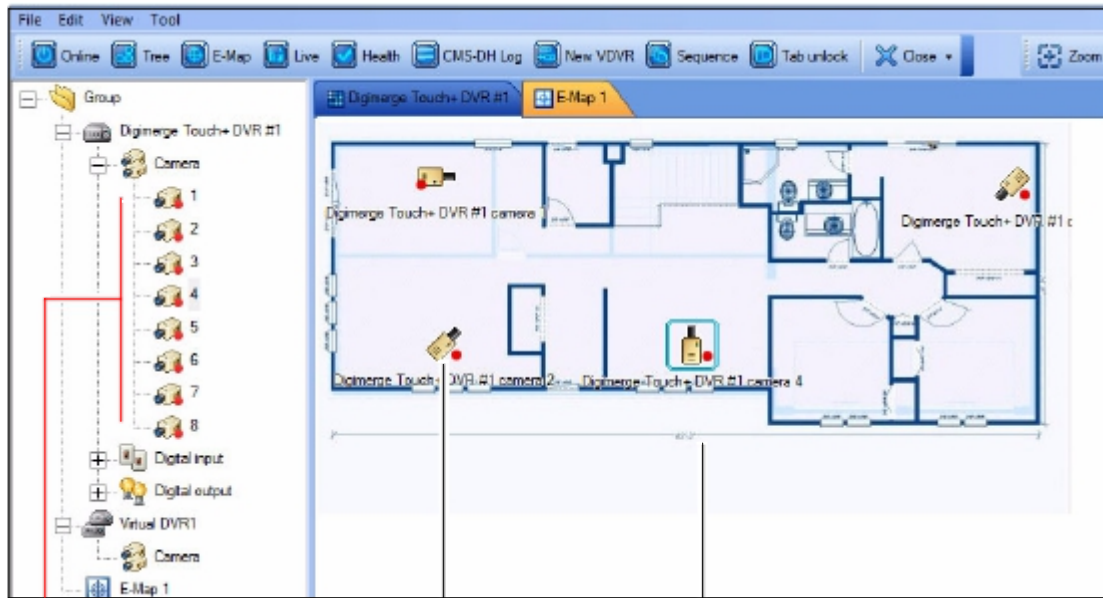

Camera list

From the camera list, you can drag the camera icon over the Jpeg image

Jpeg image of a house blueprint


Prerequisite

- Ensure the DVRs are online.


To set up an E-Map:

1. Click the **E-Map** button ().


E-Map button

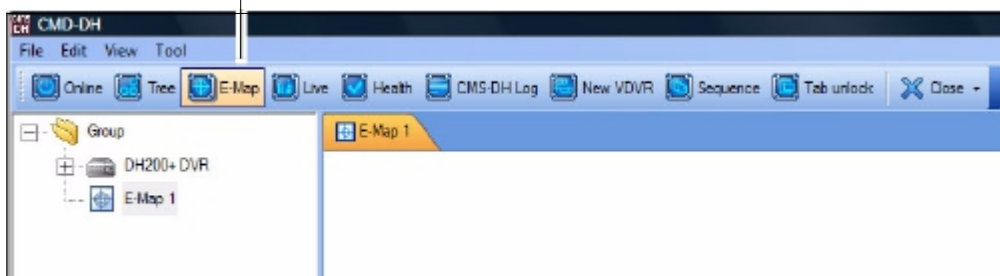

- Click **File>Background**. Locate the file you wish to import, and then click **Open**.

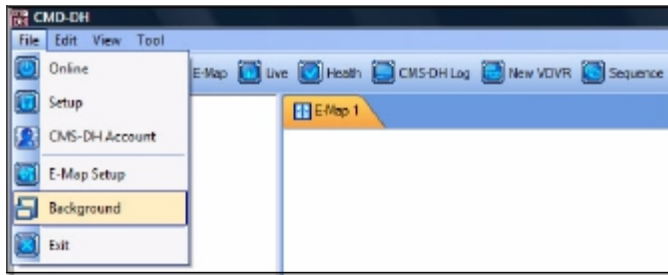


- Drag the desired cameras from the camera list, over the image.
TIP: You can also drag the DVR icon and E-MAP icon over the image.

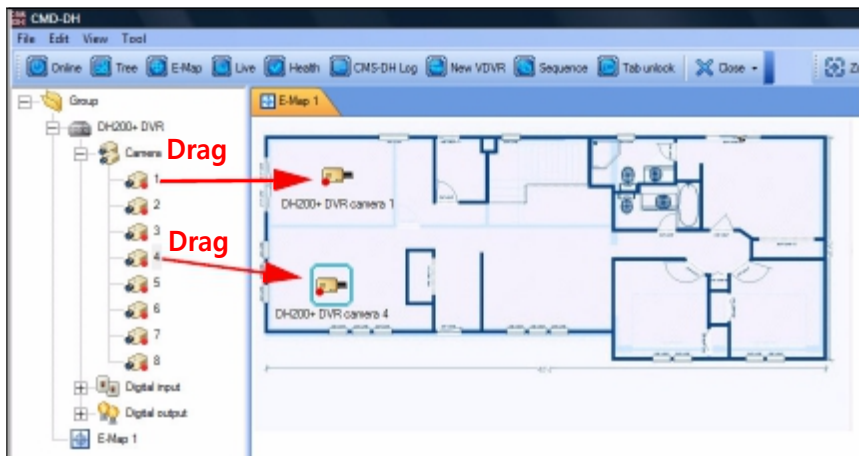

Tip:

To rotate the camera, right-click on the camera, and click Rotate.
Click the desired turning position to rotate the camera icon.

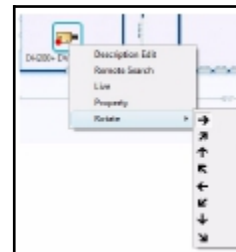

E-Map Setup

To configure the E-Map setup menu:

- Click **File>E-Map Setup**.
- Configure the following:
 - Title:** Change the camera title.
 - Show Description:** Show/hide camera name.
 - Lock:** Locks the camera position.
 - Description color:** Change e-map font color.
- Click **Ok** to save your settings.




Viewing video on E-Map

Once you have mapped your cameras on E-Map, you can view, and search channels from the E-Map directly.

To view live video on E-Map:


- Double-click on the desired camera icon to open live view.

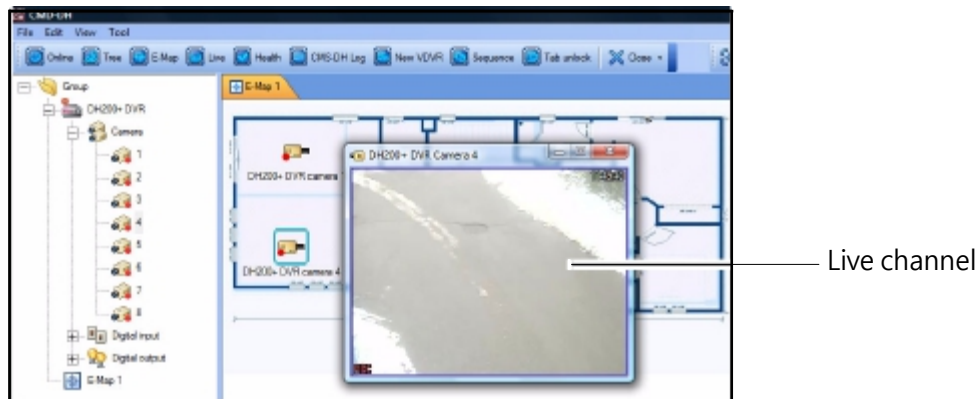

Configuring E-Map camera settings

To configure E-Map camera settings:

1. Right-click on the camera you wish to configure.
2. Configure the following:
 - **Description Edit**: Edit the camera name on the E-Map.
 - **Remote Search**: Opens the video search menu.
 - **Live**: Opens a live view window of the camera.
 - **Property**: View DVR properties.
 - **Rotate**: Rotates the camera icon in the E-Map.

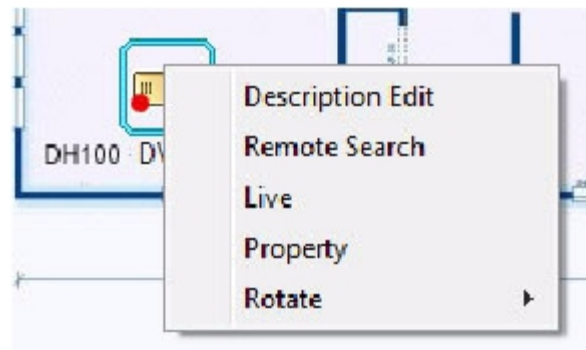

Right-click on the camera to open camera sub-menu options.

Zooming into the E-Map

- To zoom into the E-Map, click the **Zoom In / Zoom Out** buttons ().



Removing camera icon in the E-Map


- Select the camera icon in the e-map, and click the **Remove Item** button ().



Adding Multiple E-Maps

To add multiple E-Maps:

- Right-click the Group folder, and click New E-Map.

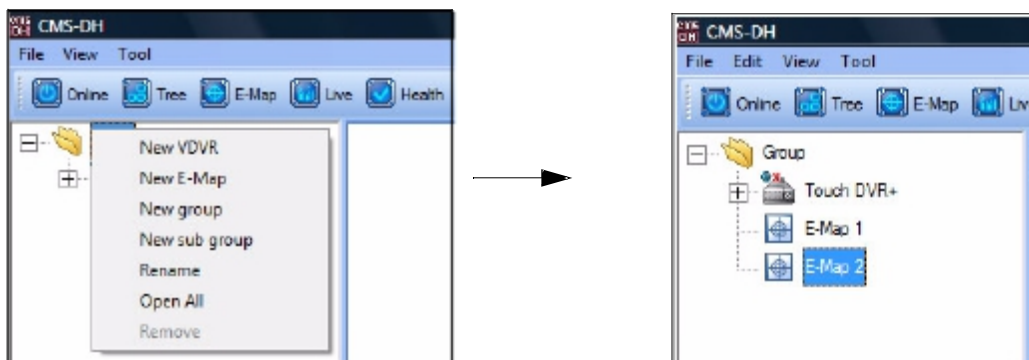


To remove the E-Map:


- Right-click on the E-Map, and then click **Remove**.

Tip: After you have created a second E-Map, you can drag the E-Map icon over a Jpeg image in the E-Map.

Viewing DVR Health

To view the status of the DVR:


1. Select the DVR on the menu tree on the left.
2. Click the **Health** button ().

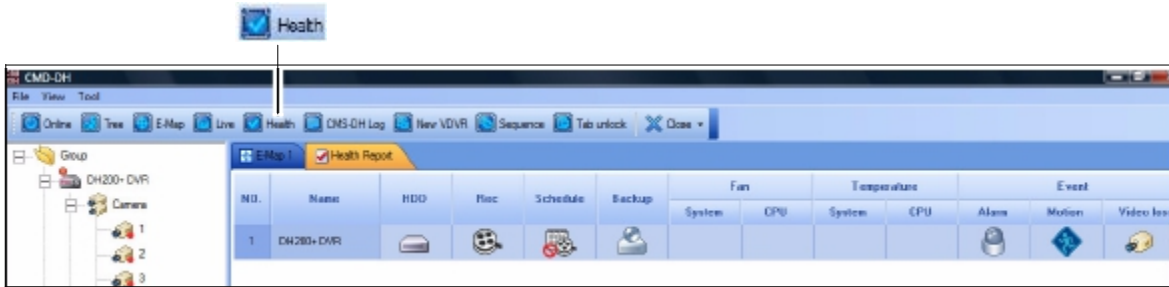

Closing windows

To close open tabs:

- Click the Close button, and select Close or Close All.

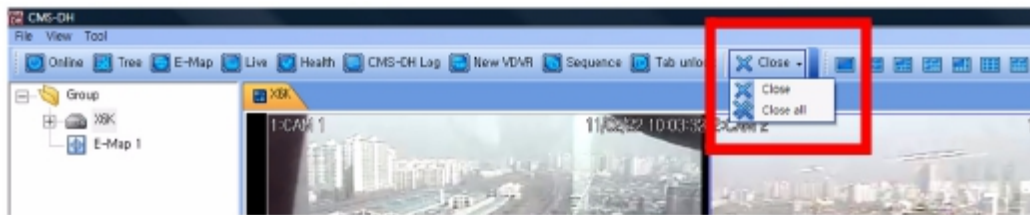

Locking Windows

- To prevent the tab from being dragged, click the Tab Unlock button.




DVR Log


The DVR log allows you to check events that occurred in the DVR, such as hard drive malfunction, video loss, motion detection, and alarm settings.

To access the DVR log:

1. Connect to the DVR that you wish to view the log from.
2. Right-click on the DVR, and click **Log**.

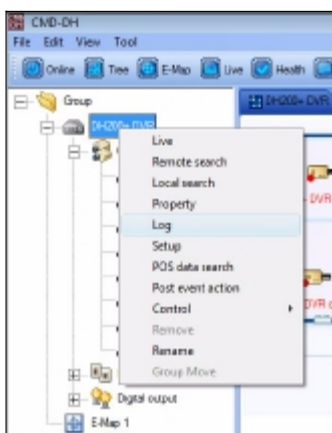

3. Configure the following:
 - **Begin & End:** Specify the start and end date and time.
 - **Query:** Select the event type you wish to search for

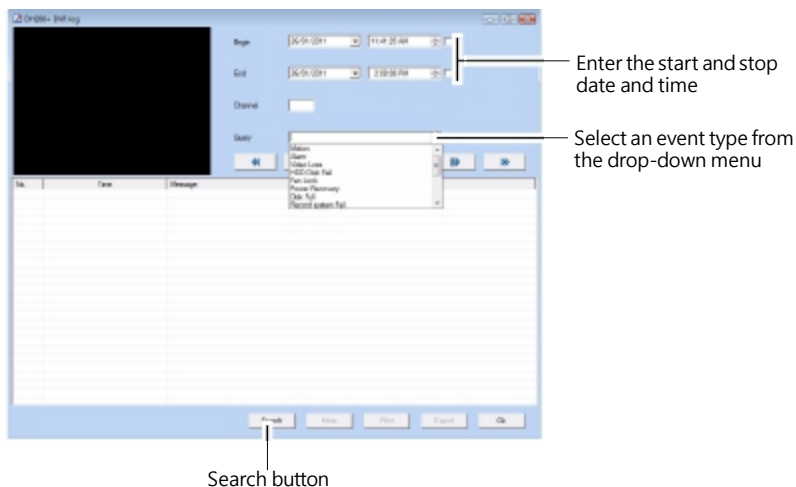

4. Click **Search** to populate results.

NOTE: Select the event and click the **Export** button to export the log as a text file. The log allows you to see any events logged by the DVR (i.e motion loss etc.).

EMS System Log


The EMS log allows you to view video events that occurred in the system (i.e motion and camera loss events).

Prerequisite:

- Ensure the DVR(s) are online and connected to EMS

To view the system log:


1. Click the EMS Log button

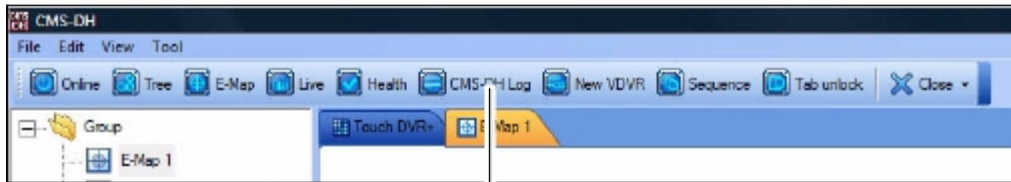

EMS Log button

2. Configure the following settings:

- **Begin:** Enter the Month, Date, Year, and time you wish to begin to search the log.
- **End:** Enter the Month, Date, Year, and time you wish the log search to stop.
- **Channel:** Enter the channel number you wish to search.

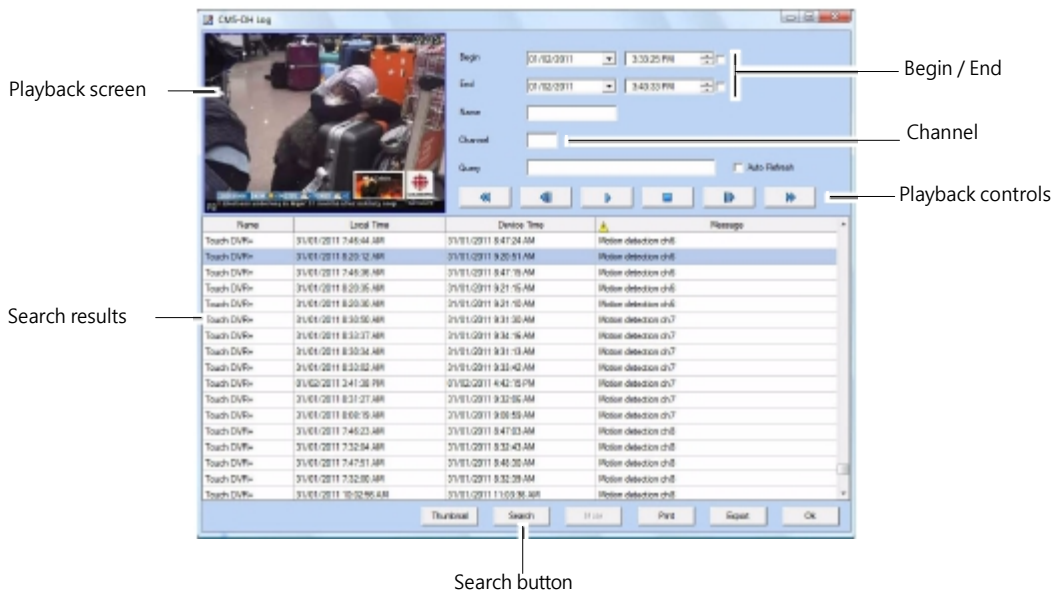


3. Click the **Search** button.

- A list of results populate. Double-click the event in the search results to begin event playback. Use the playback controls to control playback speed.


PTZ

To activate the PTZ control, click the PTZ button ().


NOTE: You must select the channel that has a PTZ camera before using PTZ controls.

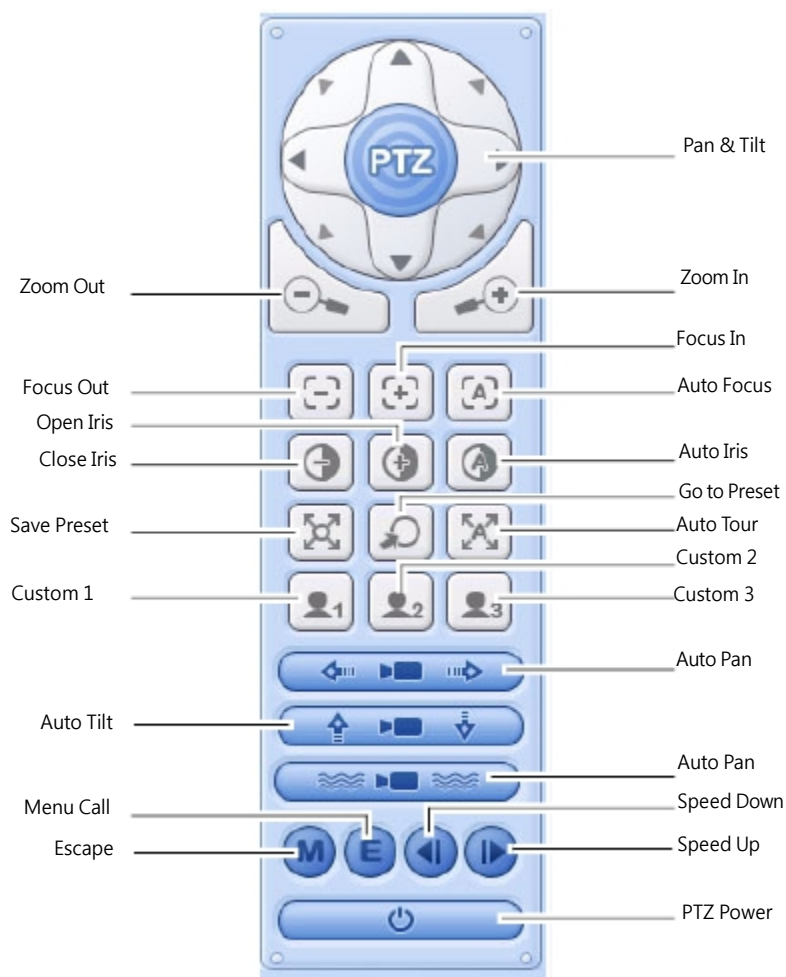

Setting PTZ Pre-Sets

1. Click the Pan & Tilt buttons to move the camera to the desired position.
2. Click the **Save Preset** button (). Enter the desired pre-set number (between 0 - 9999) and then click **Ok**.

 
To access a pre-set

- Click the **Go to Preset** button (). Enter the pre-set number, and then click **Ok**.

System Setup

To access the full system setup menu:

1. Right-click on the DVR you wish to configure.

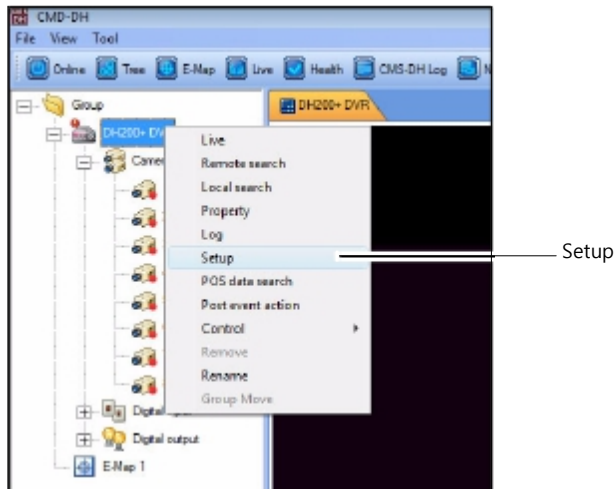

2. Click **Setup** from the sub-menu to access the full Setup menu.



NOTE: The menu structure is identical to the menu structure on the local DVR.

Configuring Post Event Action Tab

The Post Event Action tab allows your system to alert you when an alarm event triggers the DVR. For example, when the system detects motion from an input device, the computer speakers play a sound to alert you. Or, you can have the EMS software alert you with a pop-up window when motion is detected.


Setting up Post Event Actions on a NO/NC Device

Prerequisites (If setting up NO/NC Devices)

- Connect the input device into the alarm block in the rear panel of the DVR.
- Ensure you have the correct settings for the device (N/O , N/C), and that you have correctly configured the settings in the DVR menu.
- Ensure the DVRs are online.


To configure the Post Event Action tab:

1. Expand the menu tree under the desired DVR that you wish to configure.
2. Under Alarm Input, right-click the number block that your device is connected into.
3. Click **Post Event Action**.

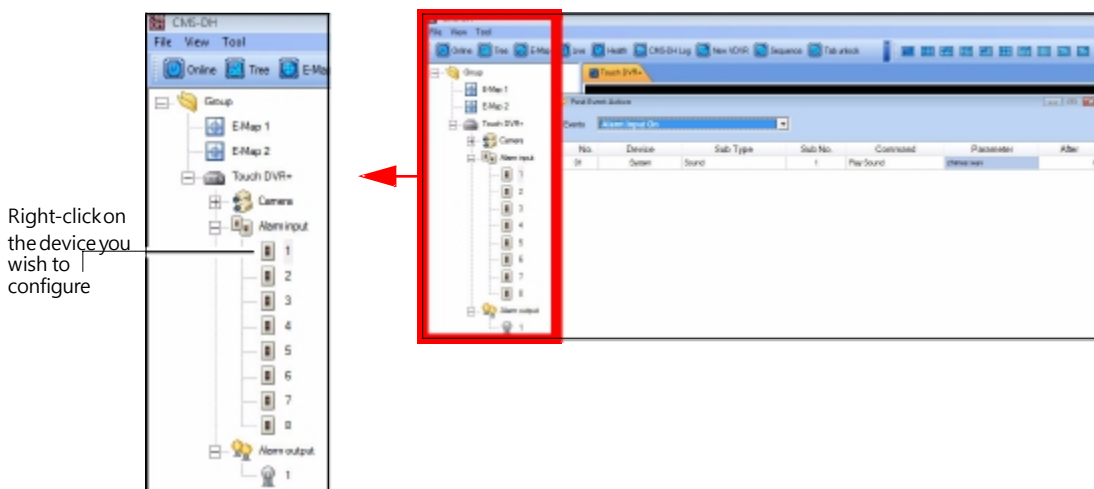


4. Configure the following:
 - Events: Select **Alarm Input ON** or **Alarm Input OFF**
 - Command: Select from **Play Sound** or **None**.

- Parameter: Select the desired alert sound you want the computer to play.

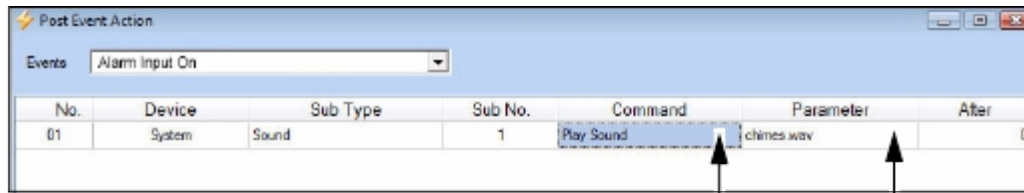

Click here to configure the Command and Parameter settings

5. Click **Apply** and then **OK** to save your settings.
6. Under Alarm Output, right-click the light bulb icon, and click **Control**.
7. Click **Alarm Output On** or **Alarm Output Off**. This depends on your device type (N/O or N/C).
8. Click **Apply** and then **OK** to save your settings.

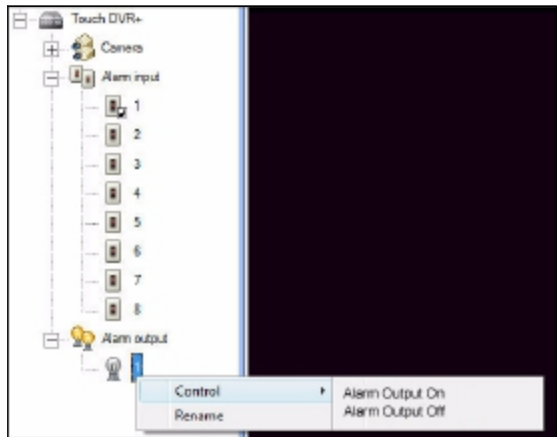


When an alarm is triggered, the system will play a sound on the computer.

Setting message pop-up notifications


You can configure EMS to produce message pop-up windows when an event occurs.

To configure EMS to produce message pop-up events:


1. Expand the menu tree under the desired DVR that you wish to configure.
2. Right-click on the camera you wish to set alerts for, and click **Post Event Action**.

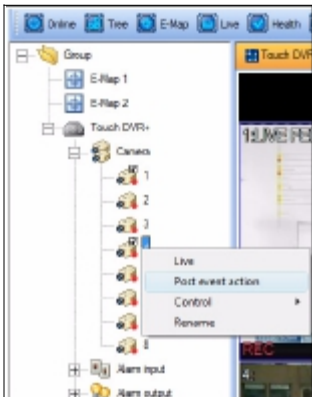


3. In the Events drop-down menu, select the type of event that will trigger EMS to produce a pop-up window when an event is detected.

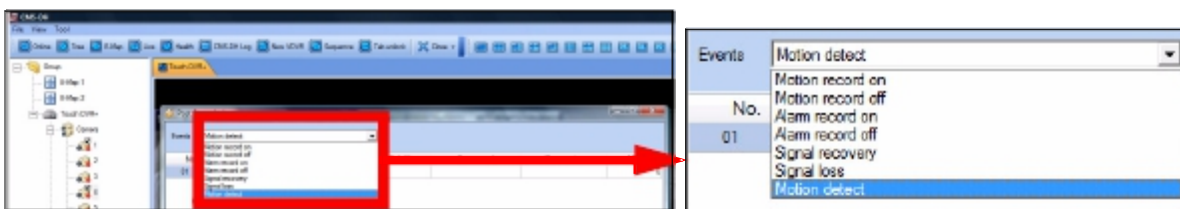

4. In the Device drop-down menu, select the **System**.

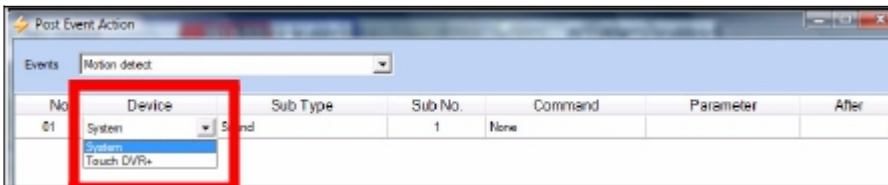


5. Under the Sub Type drop-down menu, select **Window**. Under the Command drop-down menu, select **Alert Window**.

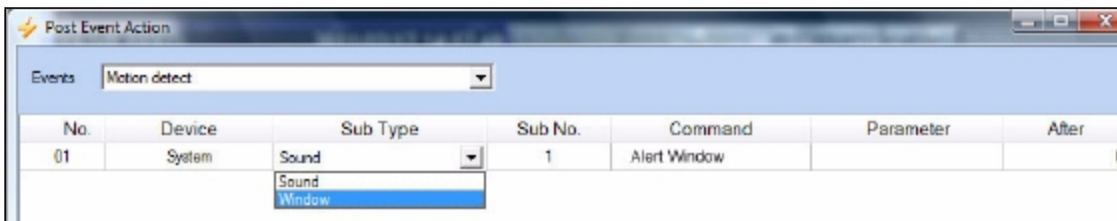

6. Click **Apply** and then click **OK**.

Result

When the camera detects motion, a pop-up window appears on the bottom-right corner of the screen to alert you.

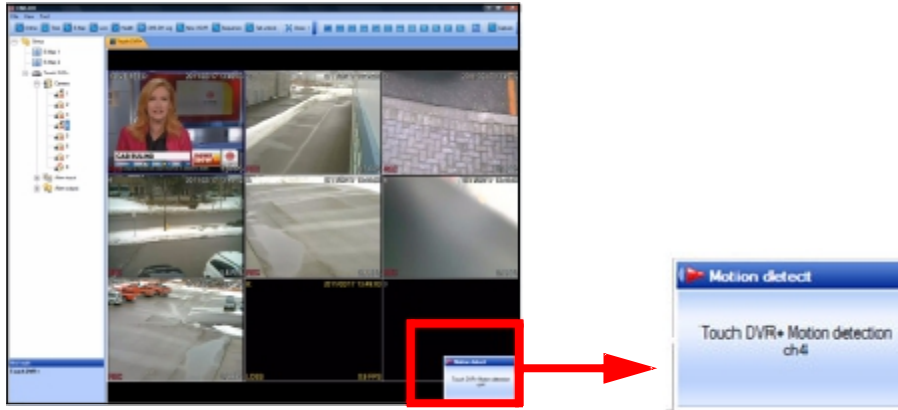


Setting Video pop-up notifications


You can configure EMS to produce video pop-up windows when an event occurs.

To configure EMS to produce video pop-up events:

1. Expand the menu tree under the desired DVR that you wish to configure.
2. Right-click on the camera you wish to set alerts for, and click **Post Event Action**.

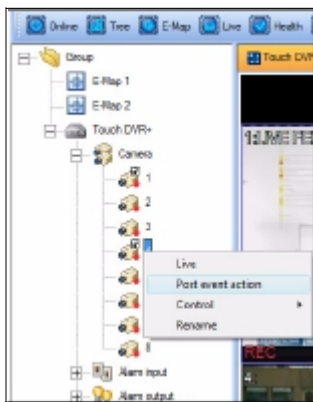


3. In the Events drop-down menu, select the type of event that will trigger EMS to produce a pop-up window when an event is detected.

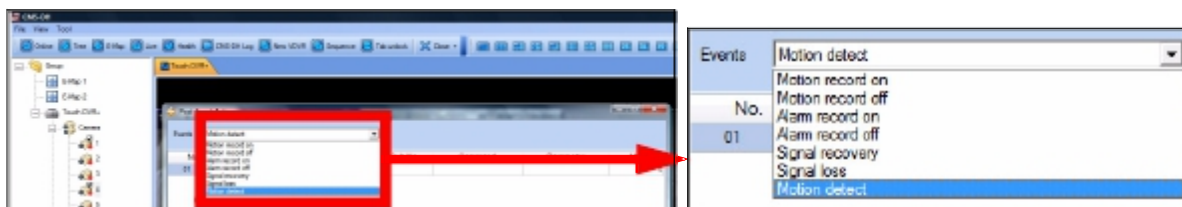


4. In the Device drop-down menu, select the name of your DVR.



5. Under the Sub Type drop-down menu, select **Camera**.

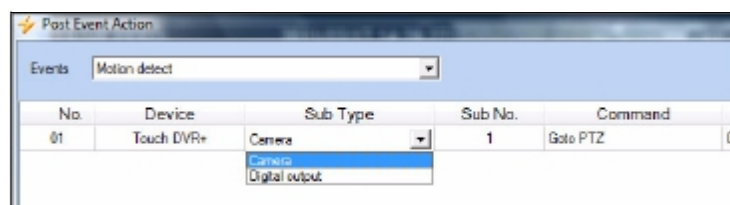

6. Under **Sub No.**, select the channel number you wish to appear as a pop-up alert.
7. Under **Command**, select Live Video.

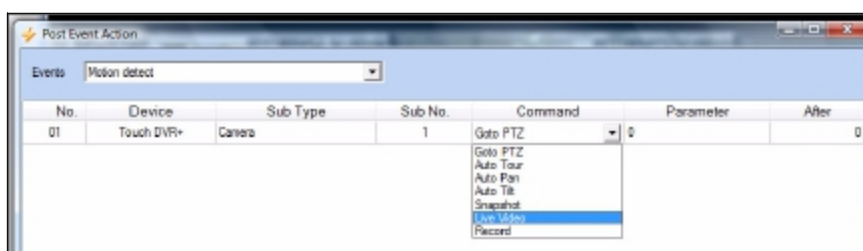

8. Click **Apply** and then click **OK** to save your settings.

Result

When the camera detects motion, a pop-up window appears with live video.



Running EMS on multiple monitors


EMS can support a maximum of 8 monitors on a single system. Running 8 monitors is extremely resource intensive. The recommended system specifications is listed below. If your system does not meet the requirements below, you may experience slow system performance.

Minimum system recommendations to run EMS on multiple monitors

- Intel Core i5 or i7 processor
- 6 GB of RAM
- A motherboard that can support up to four (4) PCI-E video cards
- Geforce 9500 GT video card, 1GB or greater

To run EMS on multiple monitors:

1. Connect to EMS. Open the desired DVR's / E-Maps etc. that you wish to view.
2. Drag the desired tabs to a different monitor.

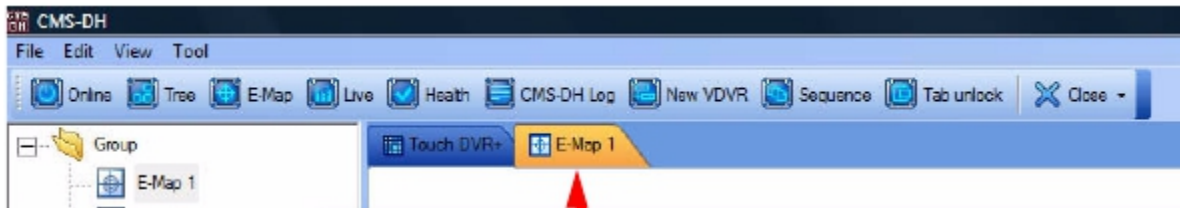

Drag the tab out to move it into a different screen.

3. Repeat as required.

Final Result



Appendix 3 : REMOTE VIEWING ON THE MAC

You can remotely connect and configure your DVR using the Safari browser in Mac OSX 10.6 or above.

Prerequisites


- Port **80** (or whichever port your system is using) must be port forwarded to your router
- The DVR must have internet access

Step 1 of 2: Installing iDVR:


1. In the address bar, enter your system's IP address or Domain Name followed by :80 — for example, **<http://192.168.1.1:80>** or **<http://K045R53D.dvrhost.com:80>**

NOTE: You MUST include **http://** in order to access your system.

2. Click **Download DVR Remote Desktop (Mac OSX 10.6 or above)**. Wait for the file to download.

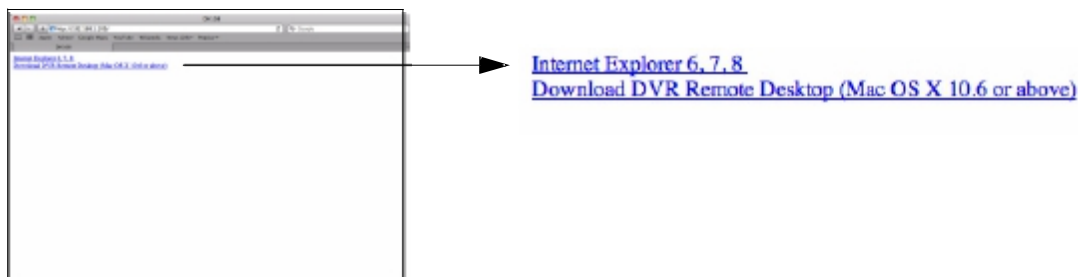


- The file saves into your Download folder.

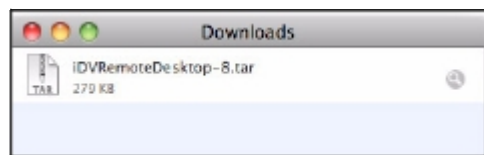

3. Double-click the file to extract the contents. The file extracts into the iDVR icon ().

Step 2 of 2: Configure and launch iDVR

1. Double-click the iDVR icon to start the program.
2. Enter the following:
 - **IP:** Enter the local IP address of the DVR or DDNS address in full (i.e. K045R53D.dvrhost.com:80).
 - **Port:** Enter the system's port number.
 - **User Name:** Enter the DVR's user name (by default, admin).
 - **Password:** Enter the DVR's password (by default, 000000).

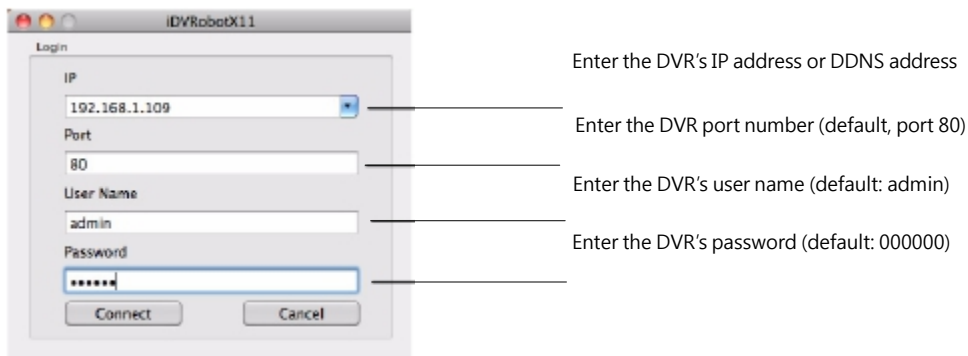

3. Click **Connect**. The system connects to your DVR.



Click the LQ / HQ button to switch between LQ (low quality) and HQ (high quality) video streaming

NOTE: The interface and functionality is identical to the local menu.

Appendix 4 : REMOTE VIEWING ON THE PC

Along with the EMS remote client software, you can also view your system remotely using Internet Explorer (version 7 or later recommended). Remote viewing through Internet Explorer allows for viewing from up to three simultaneous connections.

NOTE: Remote viewing is only compatible with Internet Explorer. Mozilla Firefox, Opera, Safari and other browsers are not supported.

Prerequisites


- Port **80** (or whichever port your system is using) must be port forwarded to your router
- The DVR must have internet access
- You must have a DDNS address to log in remotely

To view your system using Internet Explorer:


1. Open Internet Explorer.
2. In the address bar, enter your system's IP address or your DDNS domain followed by :80 — for example, **http://192.168.1.1:80** or **http://K045R53D.dvrhost.com:80**

NOTE: You MUST include **http://** in order to access your system.


3. Enter the system user name and password (by default admin / 000000). Click **OK** to log in.

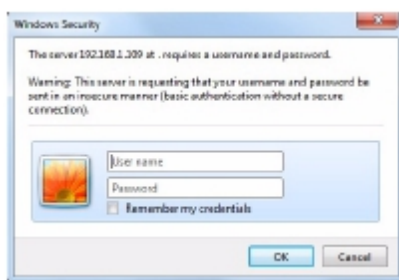


4. Click **Internet Explorer 6,7,8.**

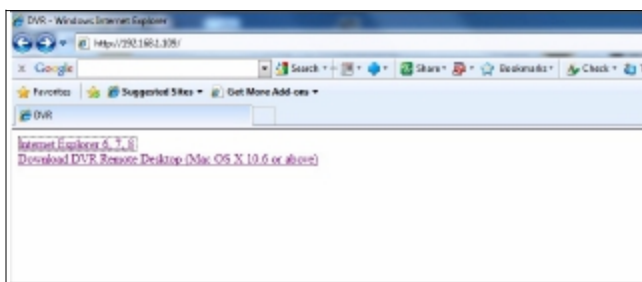


- Click the warning bar and select **Install This Add-on for All Users on This Computer**.

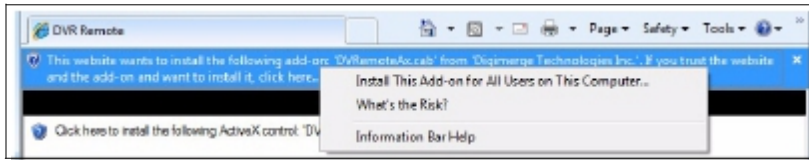

- Click **Install** to continue.

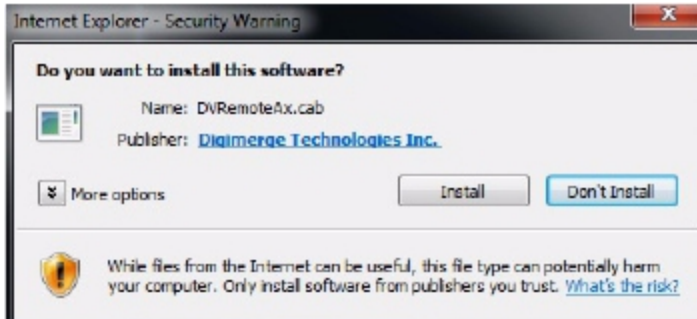

- Live viewing starts after the software installs.

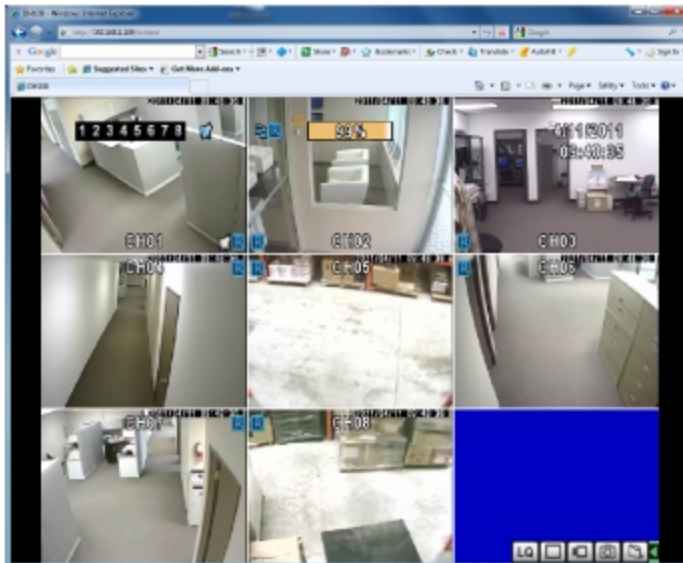

NOTE: The interface and functionality is identical to the local menu.

Appendix 5 : MOBILE CONNECTIVITY

The LR Series is compatible with the iPhone/iPad, Blackberry, and Android Devices.

iPhone /iPad

MobileCMSmini is an iPhone/ iPad app that allows you to remotely view your LR series DVR.

Compatible Devices

- iPhone 3GS, iPhone 4, iPod Touch (3rd and 4th generation), iPad
- iOS 4.1 or later
- LR series DVR

Prerequisites

- Port **80** (or whichever port your system is using) must be port forwarded to your router
- The DVR must have internet access
- You must have a DDNS address to log in remotely
- An iTunes account

NOTE: You will need to create an iTunes account before you can download the app. An iTunes store account requires a valid credit card number. The MobileCMS mini app is free of charge.

To download the app:

1. Search for **MobileCMS mini** in the iTunes App store. Download either the iPhone or iPad version of the app. Follow the onscreen instructions to install the app.



Starting MobileCMS mini

- Tap on the **MobileCMS mini** icon  to start the app.


Configuring MobileCMS mini

Once you have installed the application, enter your DVR's information to connect remotely.


Step 1 of 2: Enter your DVR information

To enter your DVR information into MobileCMS mini

1. Tap the () button

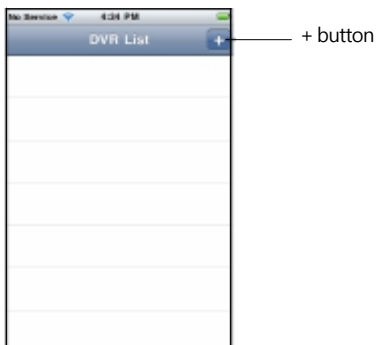

2. Enter the following:
 - **DVR Name:** Enter the desired DVR name.
 - **Host:** Enter your DDNS address (ie :K045R53D.dvrhost.com)
 - **Port:** Enter your DVR's port number
 - **User Name:** Enter your DVR's user name (by default, admin)
 - **Password:** Enter your DVR's password (by default, 000000)

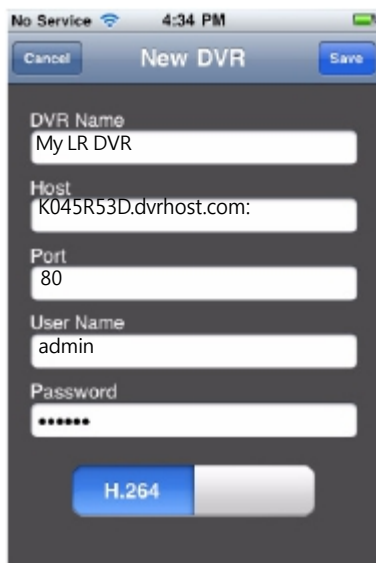


3. Tap **Save**.

Step 2 of 2: Connect to your DVR


To connect to your DVR:

1. Tap the name of the DVR you wish to connect to.

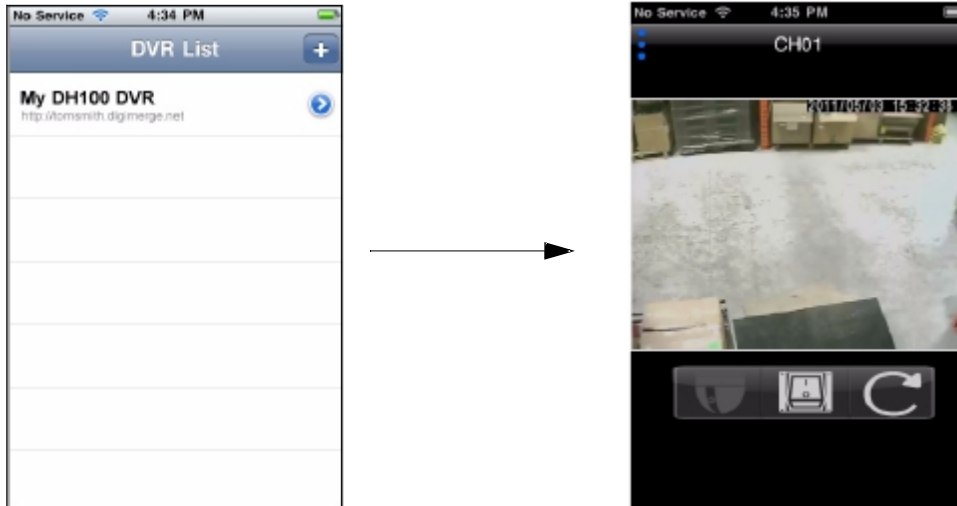

NOTE: To erase an account, swipe your finger across the name of the DVR you wish to delete. Next, tap the Delete button.


MobileCMS mini features and functions

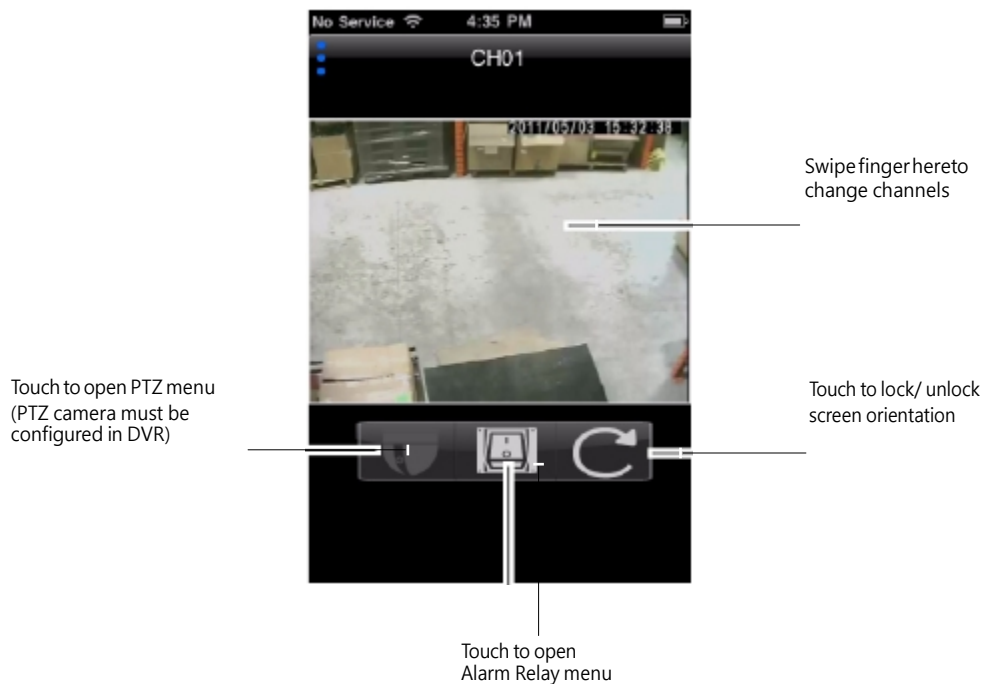


Controlling PTZ cameras

To control connected PTZ cameras:

1. Select the channel that has the PTZ camera connected.

2. Tap the PTZ button ().

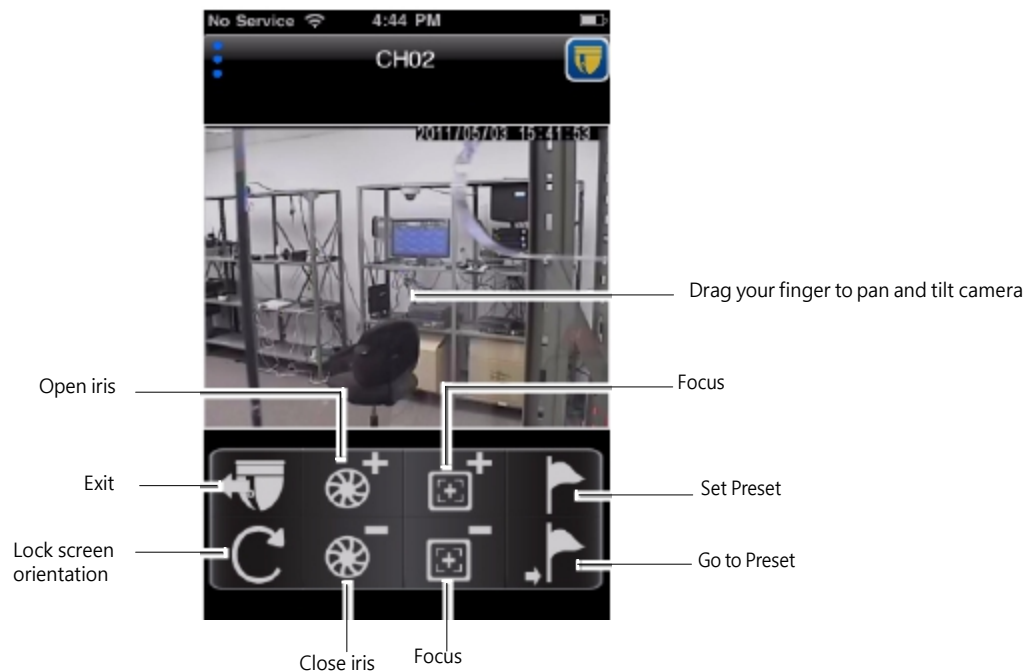

3. Perform one of the following:
 - **Pan and tilt:** Drag your finger on the main viewing window to pan and tilt the camera.
 - **Zoom:** Pinch your finger on the screen to zoom in or out.


Changing views during normal viewing


During live view:

- **Change channels:** Swipe your finger across the screen.
- **Quad view:** Pinch your finger on the screen.

Configuring the Relay menu

To open the alarm relay menu:

1. Tap the relay button ()

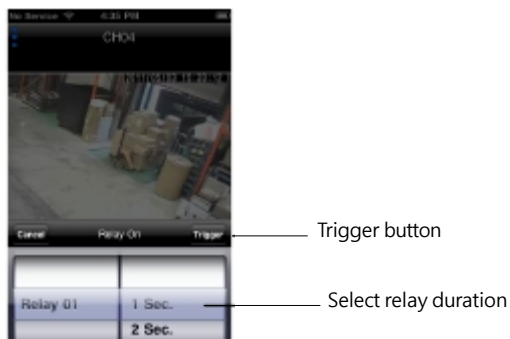


2. Select the relay duration, and tap **Trigger** to activate the relay.


Configuring Presets

The PTZ preset menu allows you to store and go to PTZ presets.


To set a preset:

1. Move the PTZ camera to the desired viewing area.

1. Tap the preset button ().
2. Enter a preset number and tap **Set**.

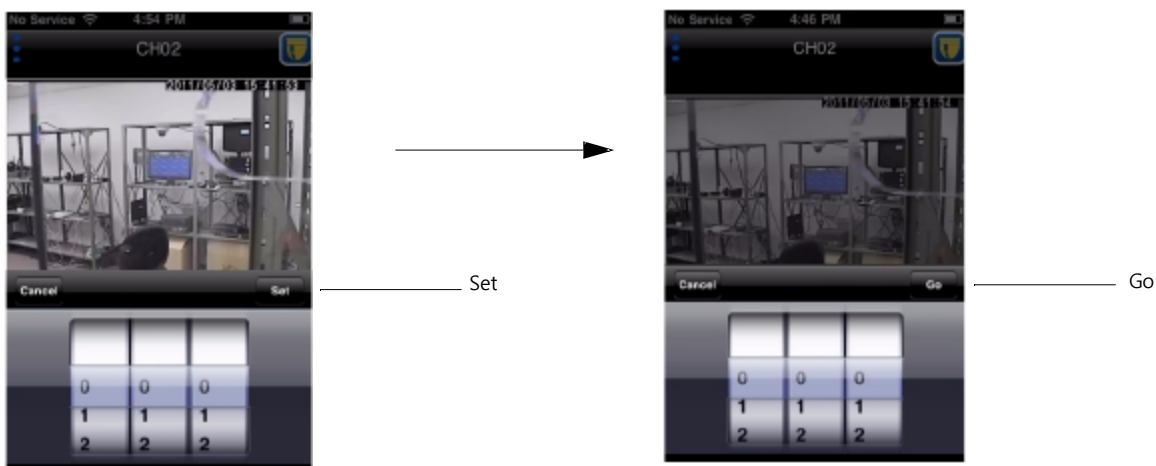

To go to a preset:

1. Tap the Go to preset button ().
2. Enter the preset number that you wish to go to, and then tap **Go**.

Android-based devices

MobileCMS mini is an Android app that allows you to remotely view your DVR.

NOTE: MobileCMS mini is capable of **viewing only**.

NOTE: These instructions are based on the HTC Wildfire smartphone. For specific installation instructions, consult your smartphone's user's manual.

Compatible Devices

- Android OS (2.1 and above, touch screen models only)
- LR Series DVR

Prerequisites


- Port **80** (or whichever port your system is using) must be port forwarded to your router
- The DVR must have internet access
- You must have a DDNS address to log in remotely
- An Android Market account

NOTE: You will need to create an Android Market account to download the app.

Installation Steps

1. Search for **MobileCMS mini** in the [Android Market](#). Follow the on-screen instructions to install the app.

 **Android Market**

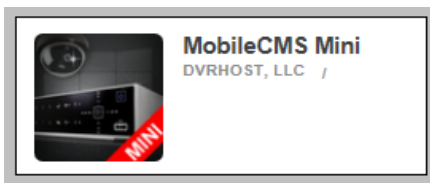

Search for **Mobile CMS mini**

Starting MobileCMS mini


- Tap on the MobileCMS mini icon  to start the app.

Configuring MobileCMS mini

Step 1 of 2: Enter your DVR information

To configure MobileCMS mini


1. Tap **New**.
2. Enter the following:
 - **DVR:** Enter the desired DVR name.
 - **Address:** Enter your DDNS address (ie :K045R53D.dvrhost.com)
 - **Port:** Enter your DVR's port number
 - **User:** Enter your DVR's user name (by default, admin)
 - **Password:** Enter your DVR's password (by default, 000000)
 - **jpeg or h264:** Select **H264** (recommended) or **jpeg**.

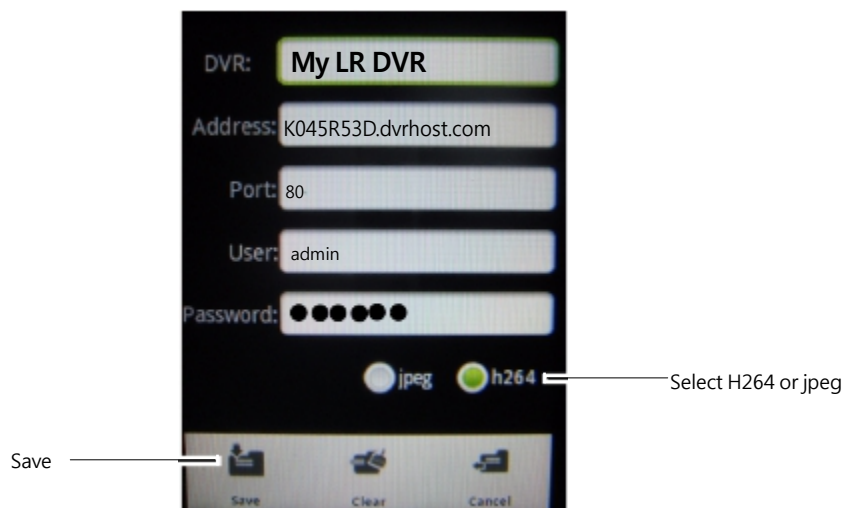

3. Tap **Save**.

Step 2 of 2: Connect to your DVR

1. Tap the name of your DVR to connect.

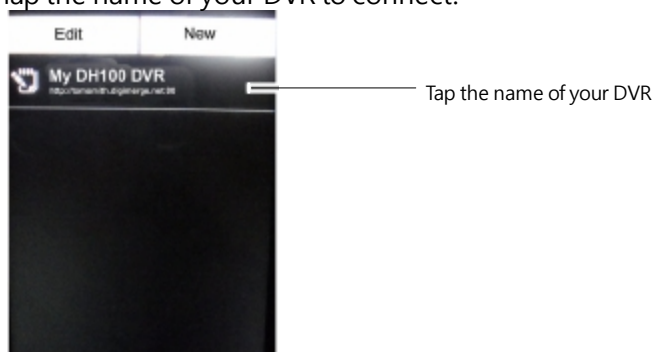

MobileCMS mini features and functions



Blackberry

"Connection h.264" is Blackberry app that allows you to remotely view your DVR.

NOTE: Connection h.264 is capable of **viewing only**.

Compatible Devices

- Blackberry 9000, 9700, 9800
- Blackberry Desktop Manager 4.6 and above
- LR Series DVR

Prerequisites

- Port **80** (or whichever port your system is using) must be port forwarded to your router
- The DVR must have internet access
- You must have a [DDNS](#) address to log in remotely
- Download and install Blackberry Desktop Manger 4.6 or greater


Before you start


- Obtain your Blackberry's **APN** (Access Point Name) from your service provider, and enable APN on your Blackberry.

Enabling APN (Access Point Name)


In order for the app to run, you must enable APN (Access Point Name) on your Blackberry. Contact your service provider for your Blackberry's APN name.

To enable APN:

1. Press the Menu button ().
2. Open the **Options** menu.

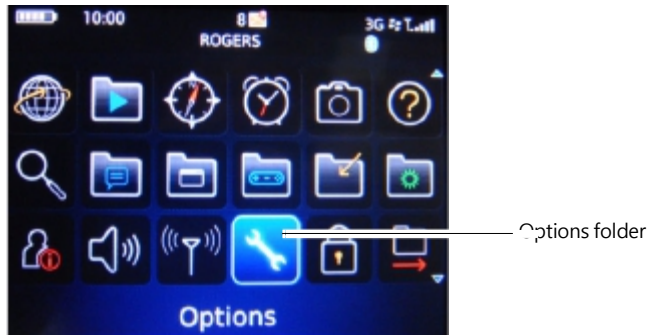


3. Select **Advanced Options > TCP/IP**

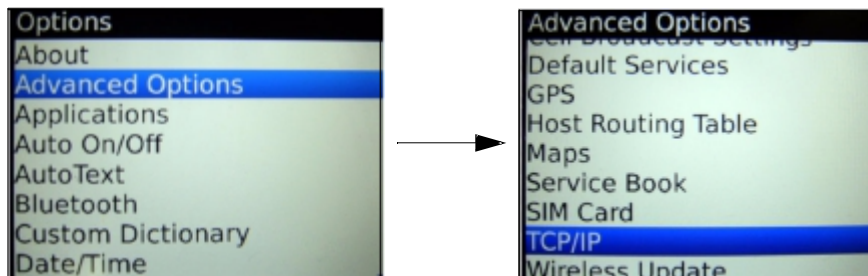

4. Select the checkbox beside **APN Settings** to enable APN.

Example

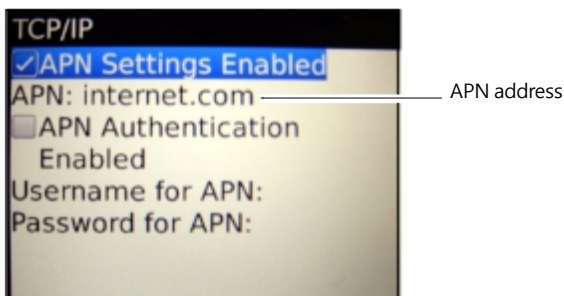

5. Beside APN, enter your APN. **You must obtain the APN from your local service provider.**
6. Exit to save your settings.


Step 1 of 3: Install the .alx file to your Blackberry

To install Connection h.264 to your Blackberry:

1. The Blackberry remote application can be provided by CBC Co, Ltd.
2. Extract the zip files to a folder. The zip file contains two files, one ending in **.alx** and one in **.cod**.
3. Connect your Blackberry to a the computer using a USB cable.
4. Launch Blackberry Desktop Manager.
5. Click on **Application Loader**.
6. Under Add/Remove Applications, click **Start**.
7. Locate and open the **.alx** file you extracted.
8. Click **Next** to install the software.

Step 2 of 3: Configure "Connection h.264"

1. Launch the Connection h.264 app (usually in the Downloads folder).

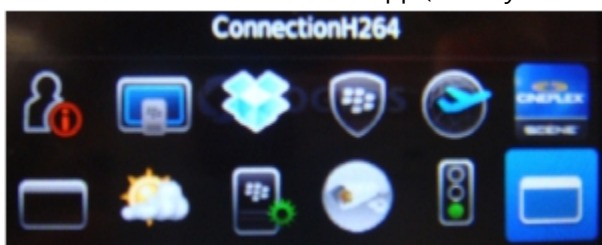


Connection H.264 app

2. Press the Menu button () and click **Add**.




3. Enter the following:
 - **NAME:** Enter the desired DVR name.
 - **IP:** Enter the DVR's local IP address or DDNS address (i.e :K045R53D.dvrhost.com))
 - **PORT:** Enter the DVR's port number.
 - **ACCOUNT:** Enter your DVR's user name (by default, admin).
 - **PASSWORD:** Enter your DVR's password (by default, 000000).

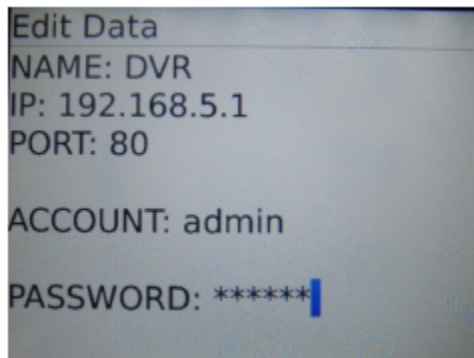


4. Press the Menu button () and select **OK**.

Step 3 of 3: Log in to your DVR

 
To log in to your DVR:


1. Select the name of your DVR, press the Menu button () and select **Login**.

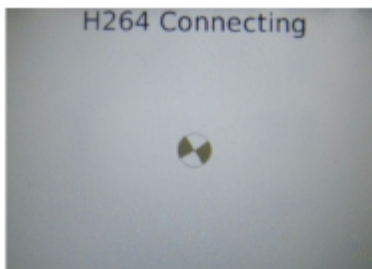

Functions and features


Changing channels

1. During live view, press the Menu button () to open the sub-menu.

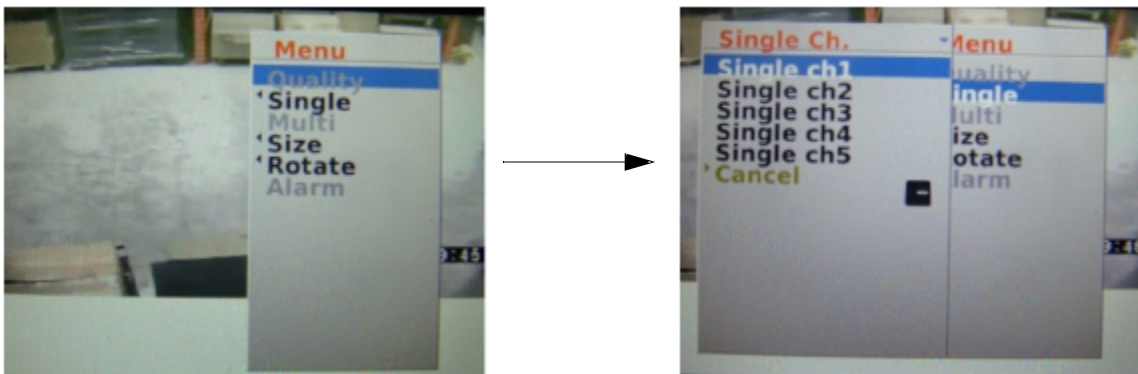

2. Select **Single**, then select the desired channel.


Viewing in full screen

1. During live view, press the Menu button () to open the sub-menu.
2. Select **Size**>**Fit Screen**.



Changing viewing orientation

To change the screen orientation from portrait to landscape:

1. During live view, press the Menu button () to open the sub-menu.
2. Select **Rotate**.